



WPC GARDEN SHEDS INSTALLATION MANUAL FOR H307

Canopy on the right side

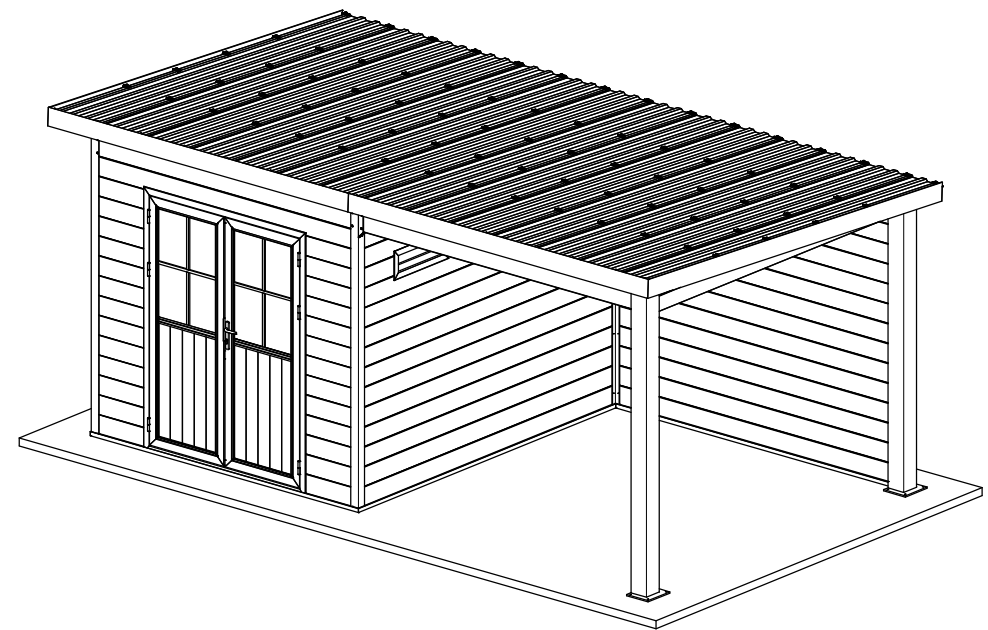


5.2x2.88 m

APPEARANCE & SIZE :

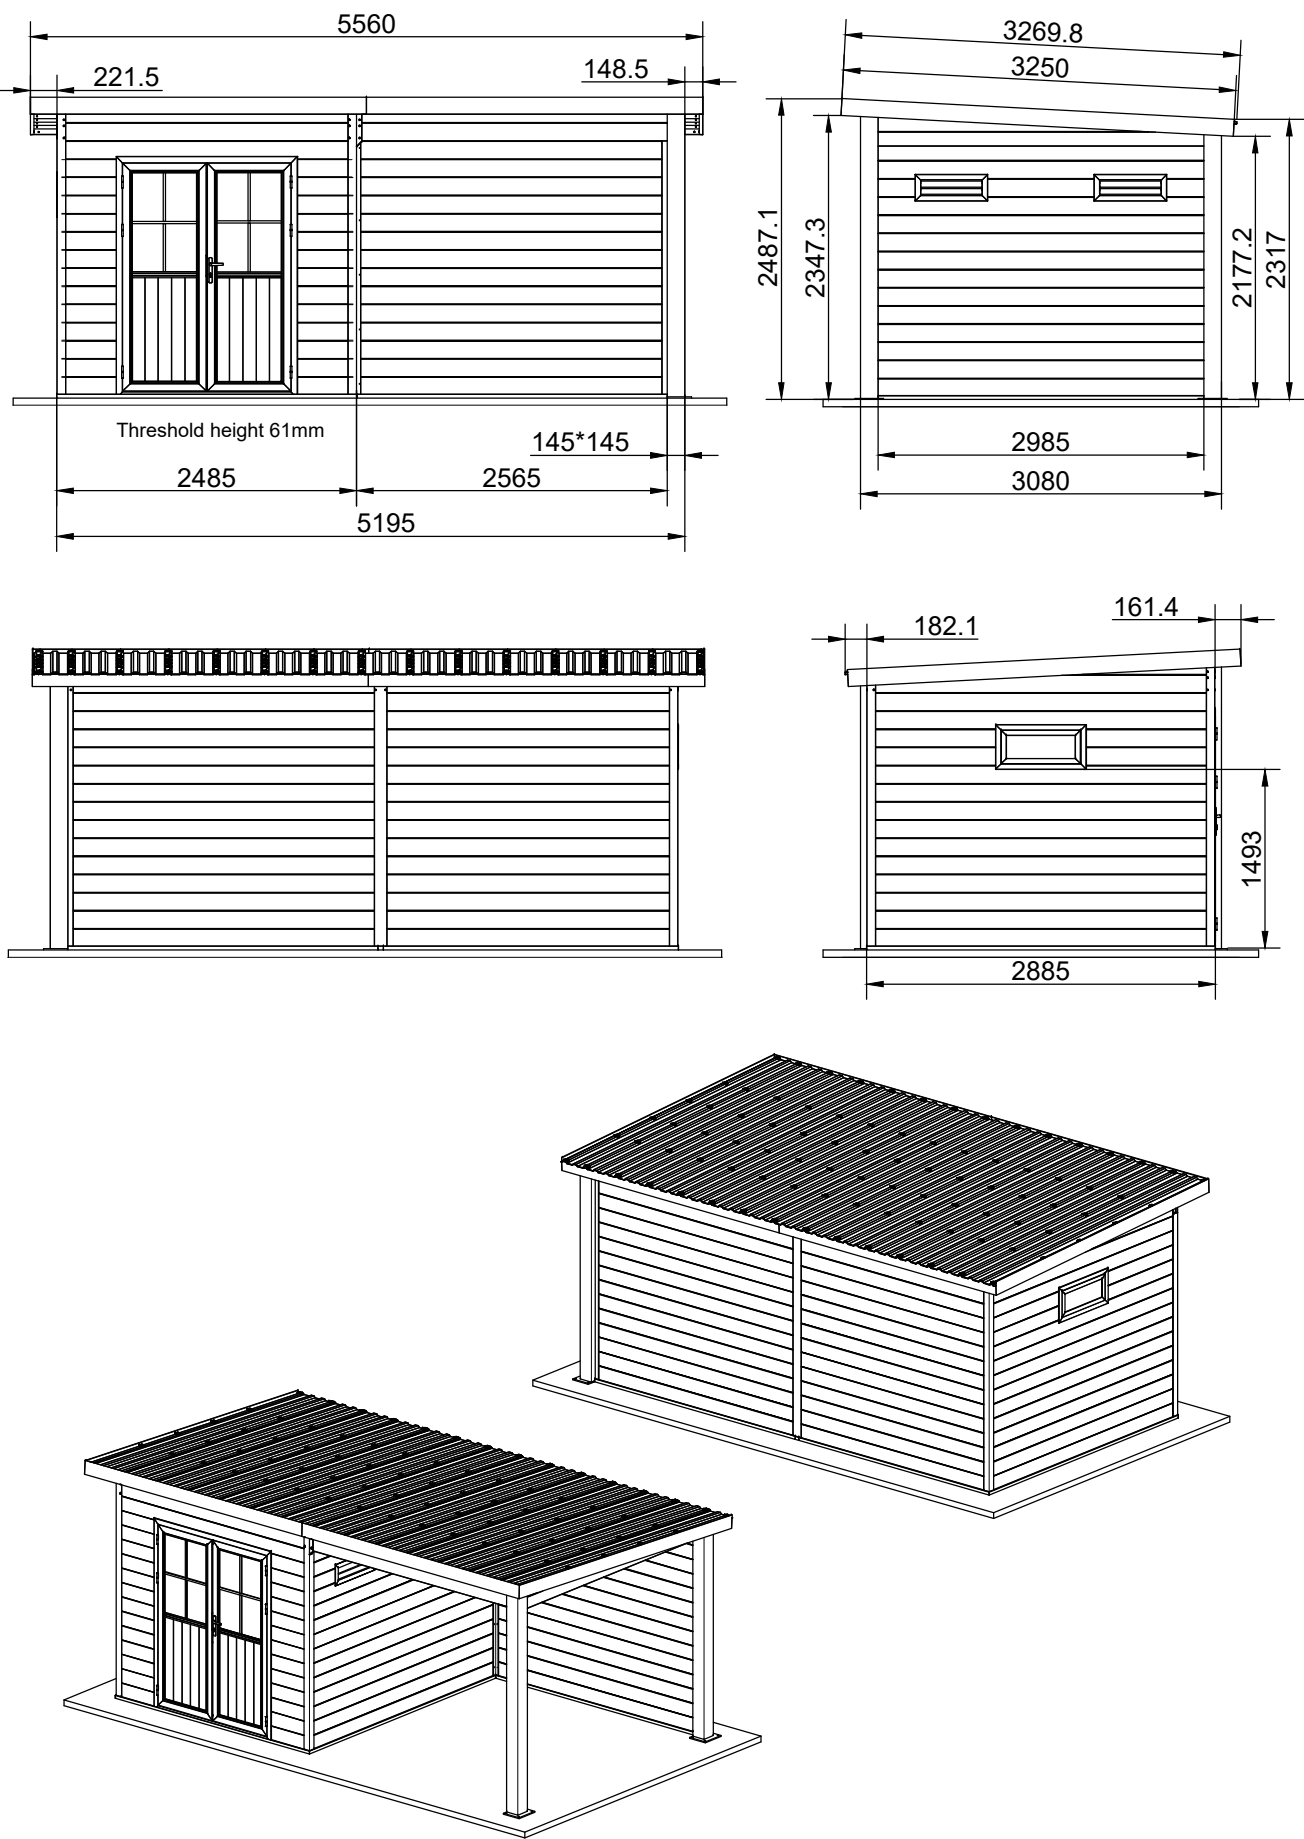

Installation Requirement :
































When do the assembling of a garden shed, a hard and flat ground without slope is needed. Please also make sure that the installation site has a good ventilation and drainage condition.

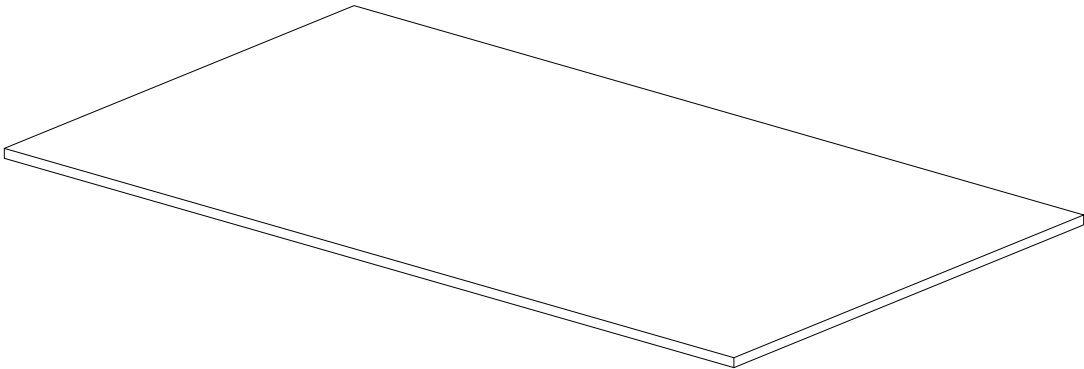

































When dealing with any type of construction project, it is necessary to wear appropriate safety equipment to avoid any risk of injuries. We recommend but not only limited to the following safety equipment when handling, cutting, and installation : gloves, eye protector, respirator, long sleeves and pants.

Impact electric drill 	Cutting machine 	Electric screwdriver 	Tape & Hammer 	Ladder
Levelling Instrument 	L-square 	Tape Measure 	Allen Key 	Structural Adhesive
Safety helmet 	Goggles 	Work clothes 	gloves 	protective shoes


List of components

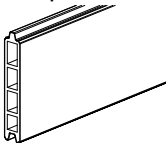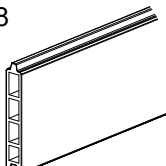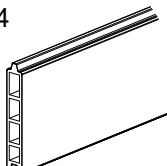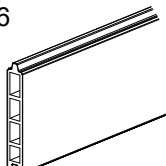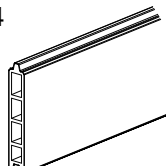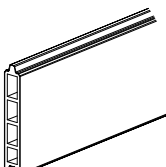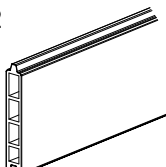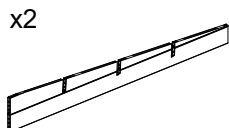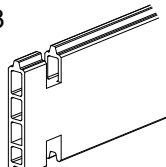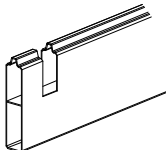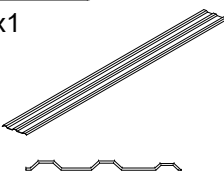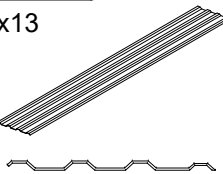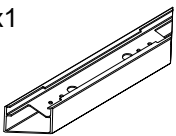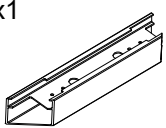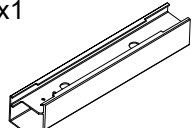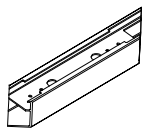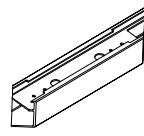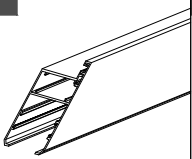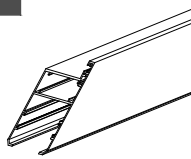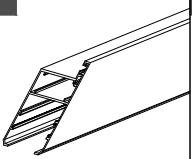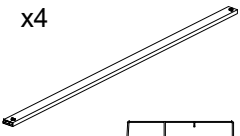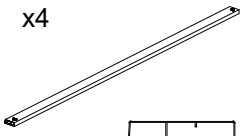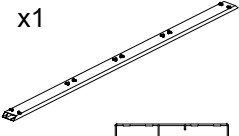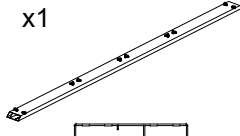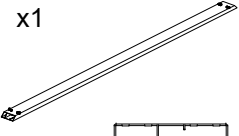WP1 x25 + spare 1  L=2800mm	WP24 x18  L=2400mm	WP3 x14  L=2560mm	WP28 x26  L=485mm	WP78 x4  L=1065mm
WP64 x1  L=960mm	WP61 x2  L=400mm	WP6 x2  L=2800mm	WP99K x1  L=2960mm	WP108 x3  L=2700mm
AP100 x1  L=2960mm	TW5K x1  L=3270mm	TW5 x13  L=3270mm	PO1 x1 	PO2 x1 
BF1 x1  L=2885mm	BF3 x1  L=2840mm	BF4 x1  L=2565mm	BF11 x1  L=2485mm	BF12 x1  L=2440mm
MF1c x1 	MF2b x1 	MF3b x1 	MF4 x1 	MF5 x1 
MF20b x1 	DF1 x1  L=1965mm	DF2 x1  L=1965mm	DF3 x1  L=1500mm	DF4 x1  L=1430mm
CF66 x4  L=2750mm	CF67 x4  L=2750mm	CF68a x1  L=3250mm	CF68b x1  L=3250mm	CF69 x1  L=2780mm



List of components

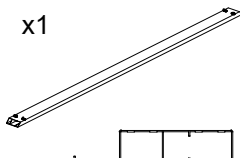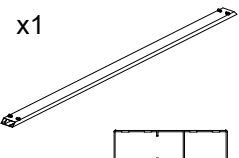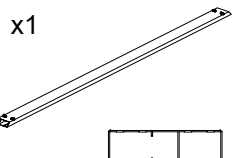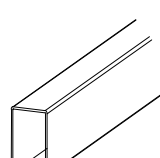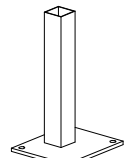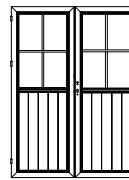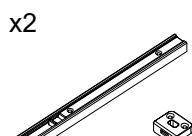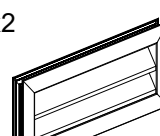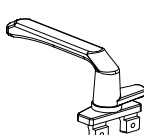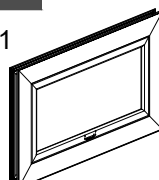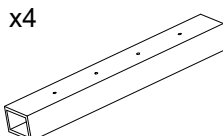CF70 x1  L=2780mm	CF71 x1  L=2780mm	CF72 x1  L=2780mm	UC307  UC307-4 487mm x1 UC307-2 514mm x3 UC307-5 517mm x1	
CL-1 x3 	CL-2 x1 	CL-4 x2 + spare 2 	CL-5 1+1  L=2700mm x1 L=2900mm x1	CL-8, CL-9, SC-7 x4  8 + 2 M6 x4 + spare 2
CL-21 x4 	CL-31 x4 + spare 1 	CL-32 x4 + spare 1 	CL-33 x12 + spare 1 	ST1 x2 
SC-1 x225 + spare 45  M4.2x19mm	SC-1G x48 + spare 22  M4.2x19mm	SC-3 x7 + spare 3  M4.8x60mm	SC-4 x32 + spare 4  M6x40mm	SC-5 x10 + spare 2  Ø8x80mm
SC-6 x8 + spare 1  Ø12x120mm	SC-8 x8 + spare 2  M4.2x30mm	SC-10 x4 + spare 2  Ø4.8xØ16x16mm	SC-14 x2  M5x20mm	CL-35 + SC-12 x90 + spare 40  M4.8x50mm
DP-1 x1 	SU-1 x1  8530	SU-2 x2 	WD3 x2  600x220mm	Drill 1 , Drill 2 1+1  Ø2.8 Ø7
SU-9 x1 	WD32 x1  750x370mm	G1 x4  L=300mm	G2 x4  L=200mm	G3 x4  L=200mm




STEP 1 :

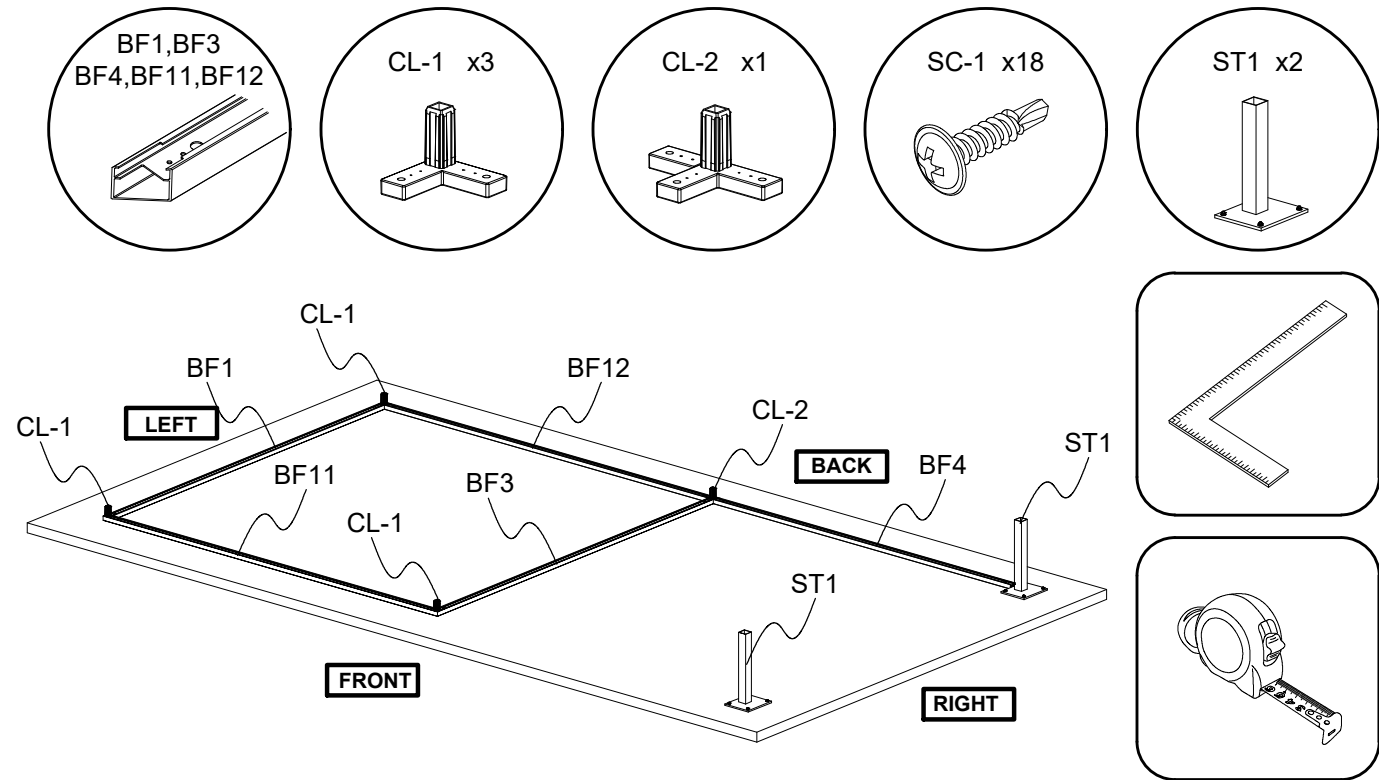




Dimension:

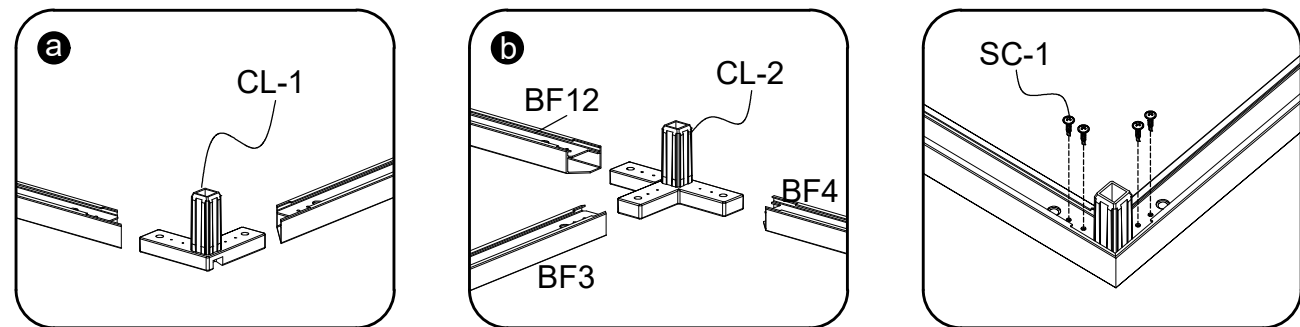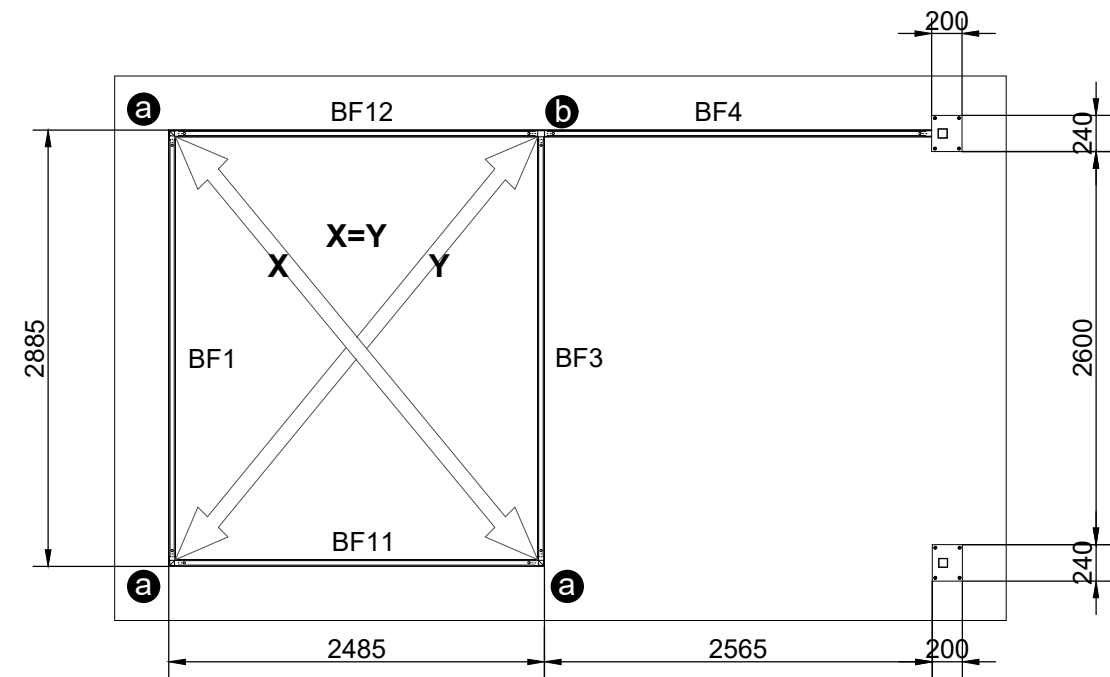











STEP 2 : Expansion screws

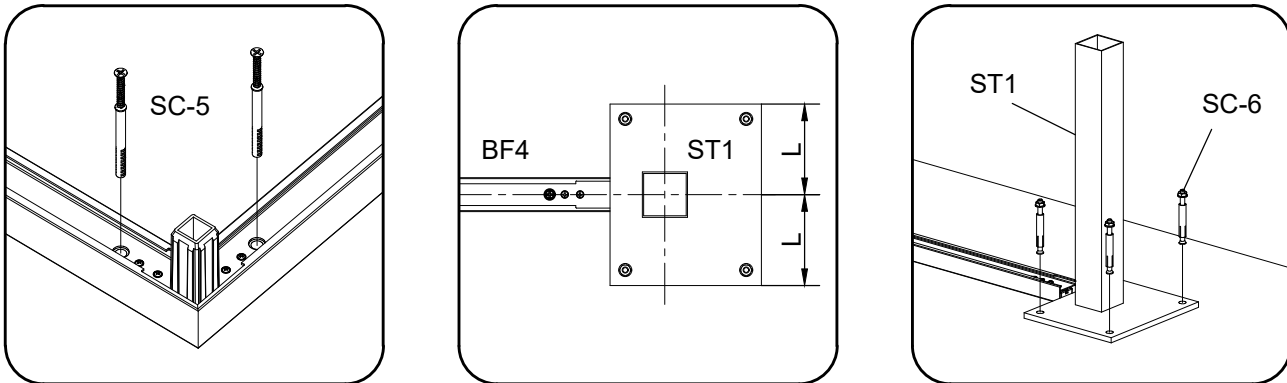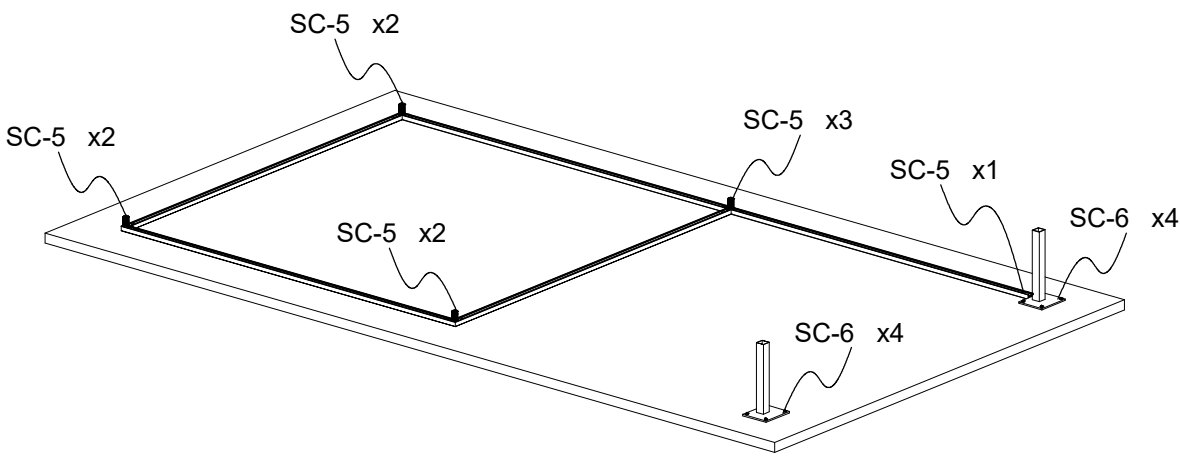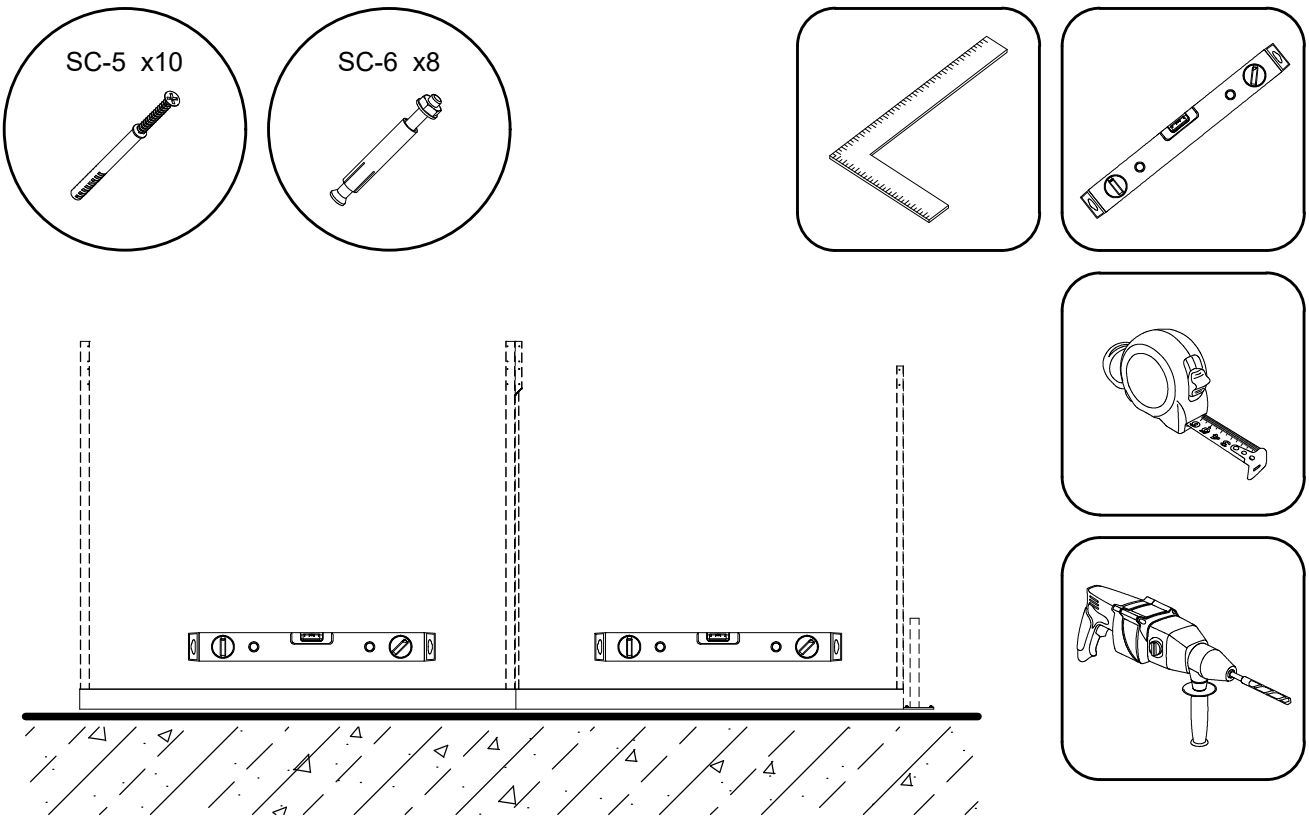


STEP 3 :

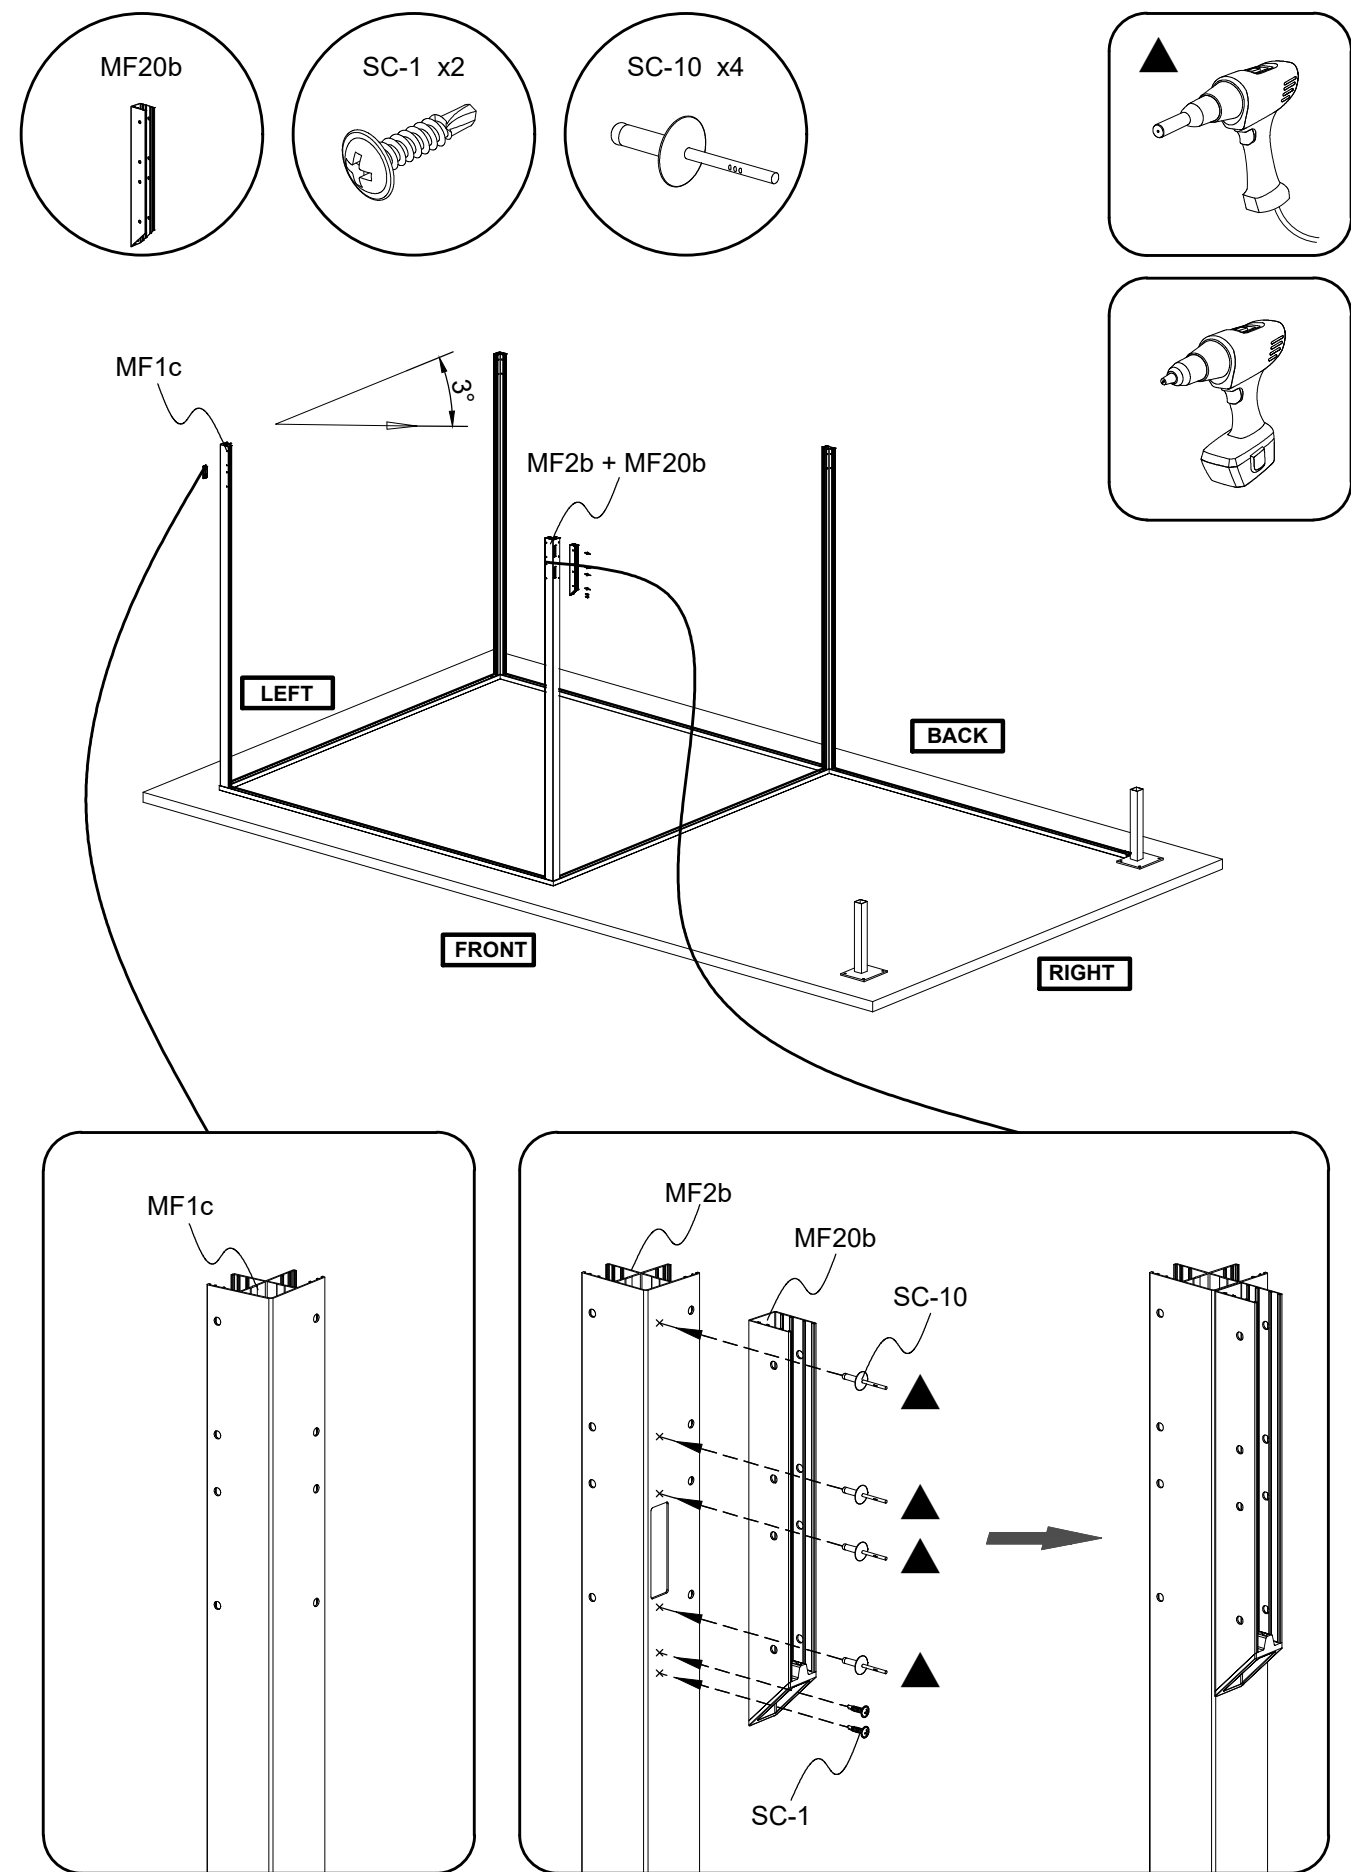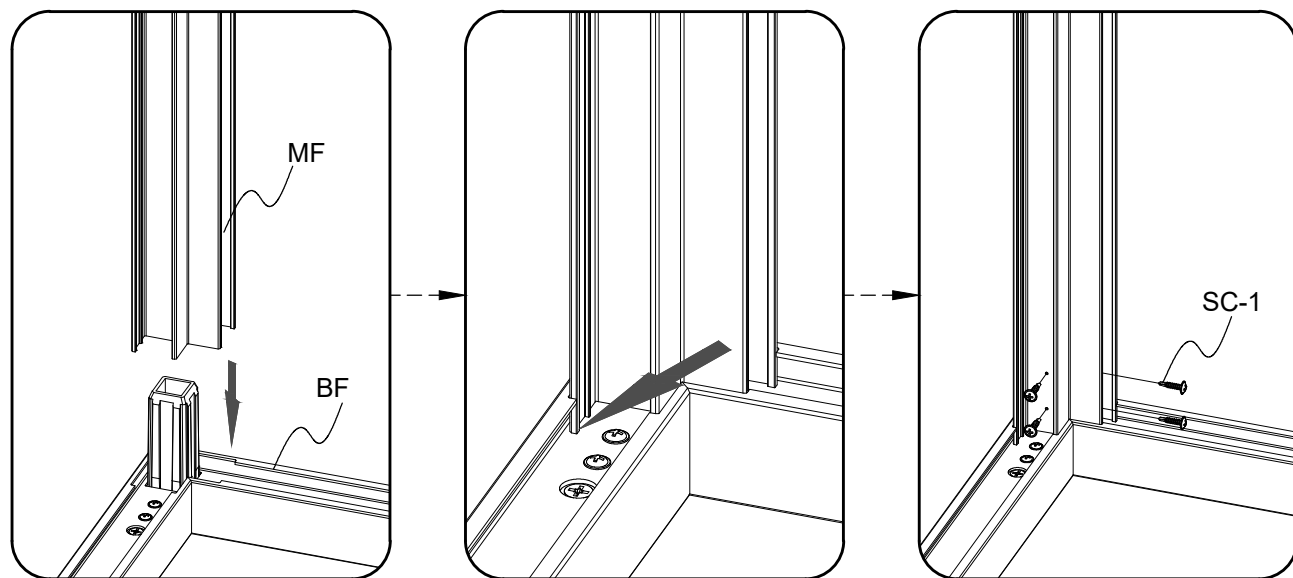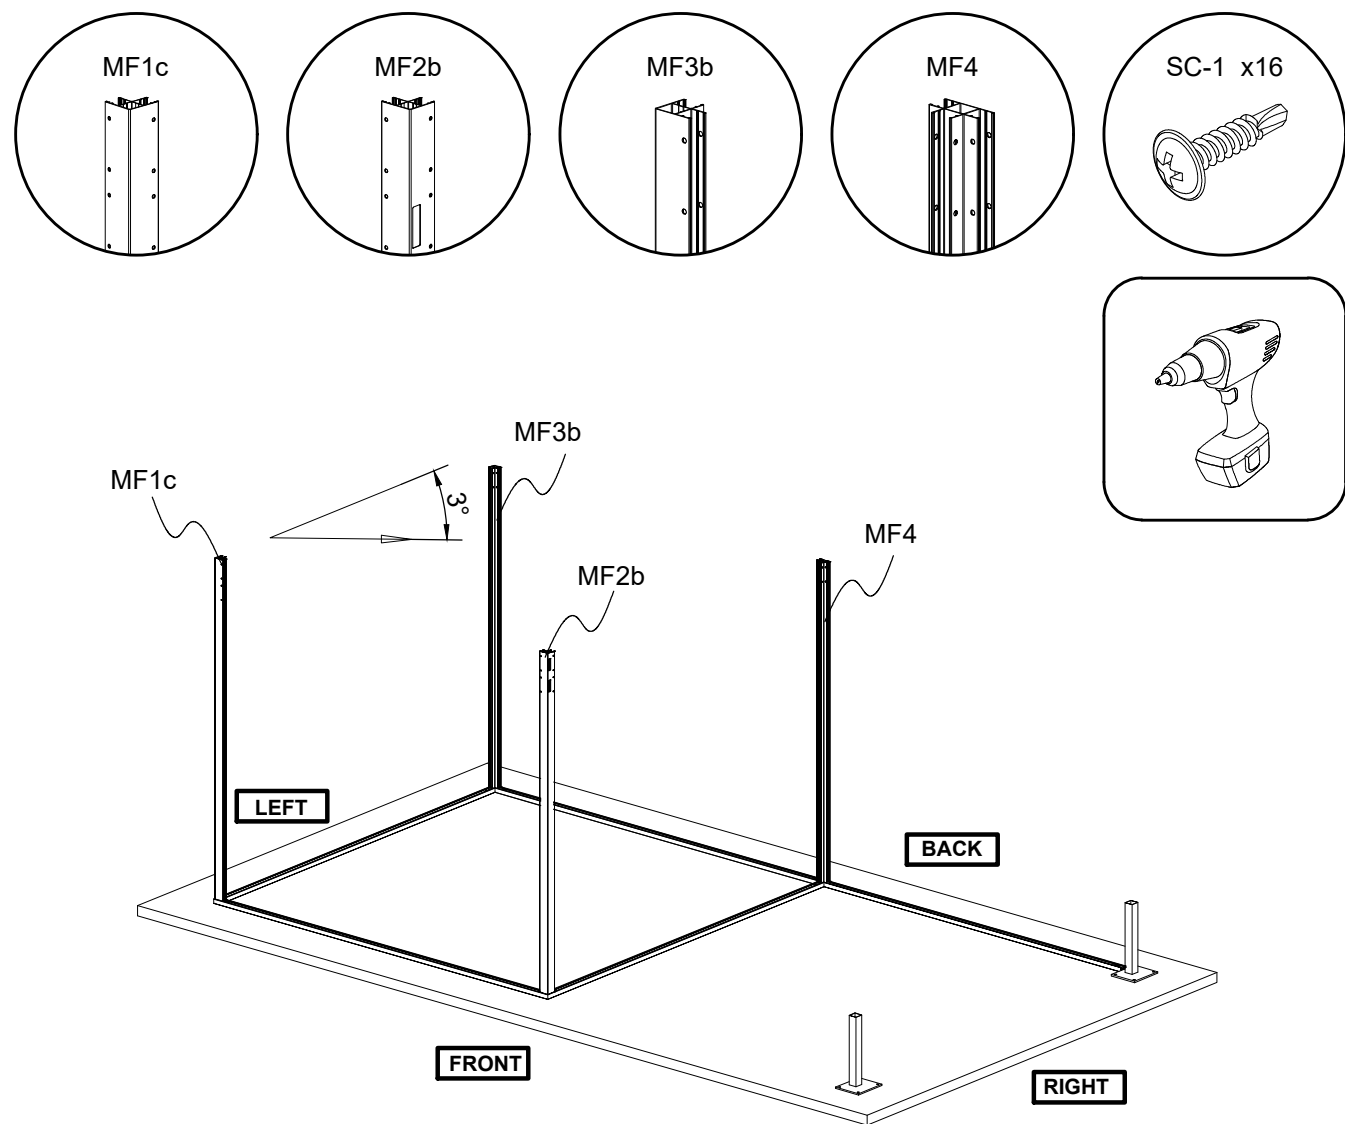











STEP 4 :

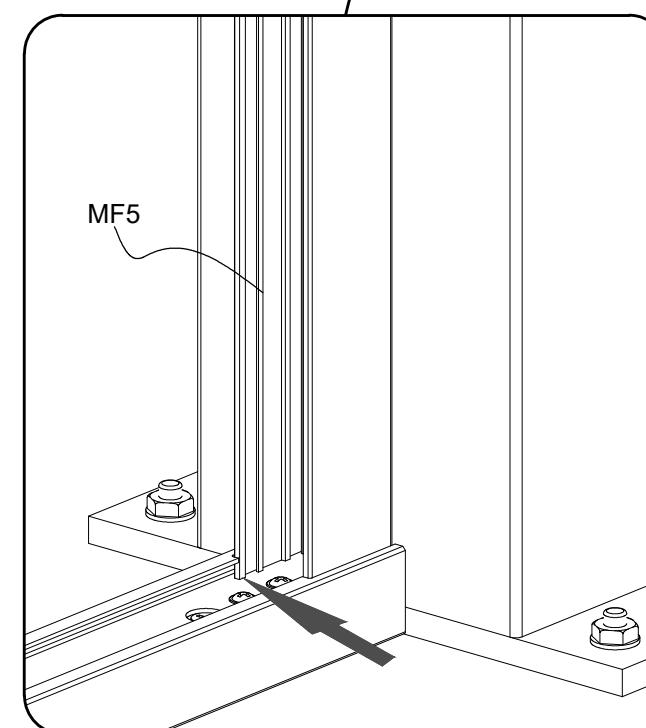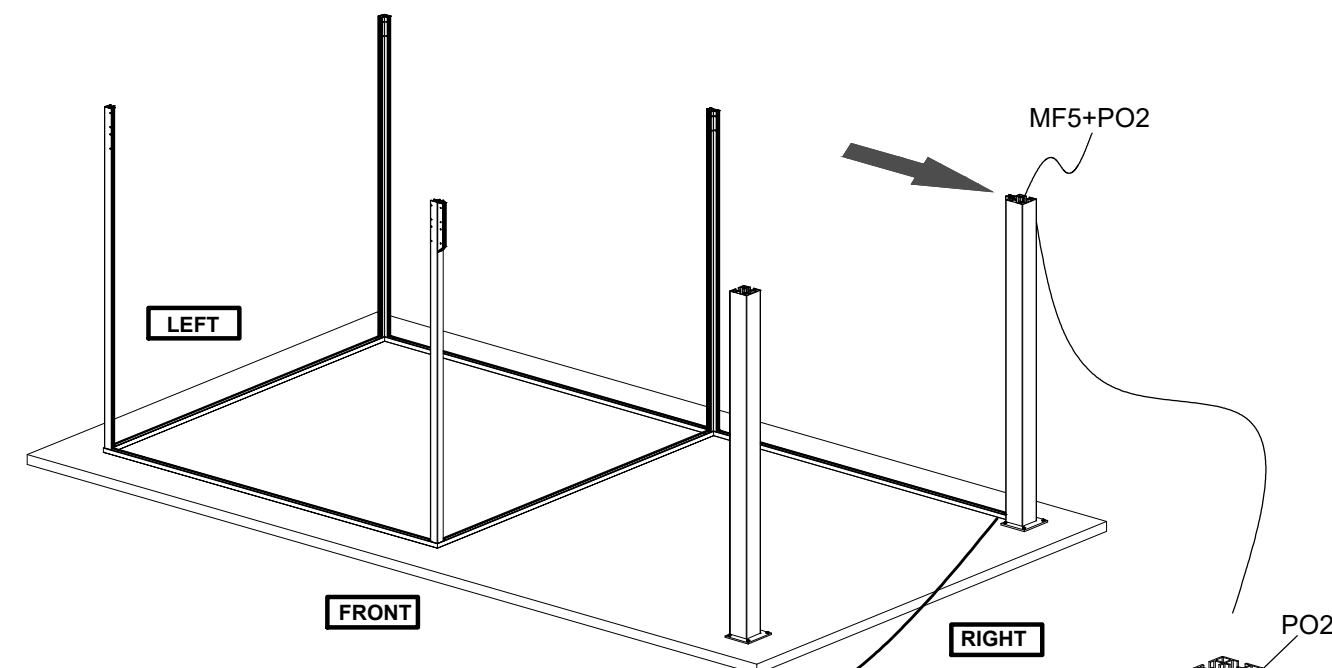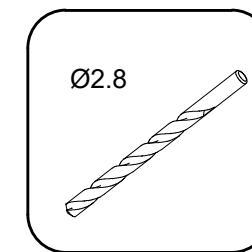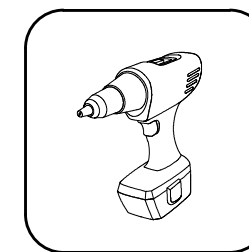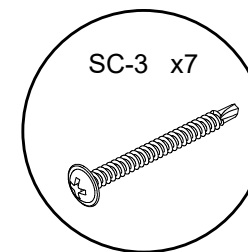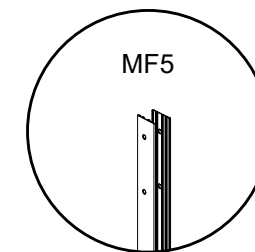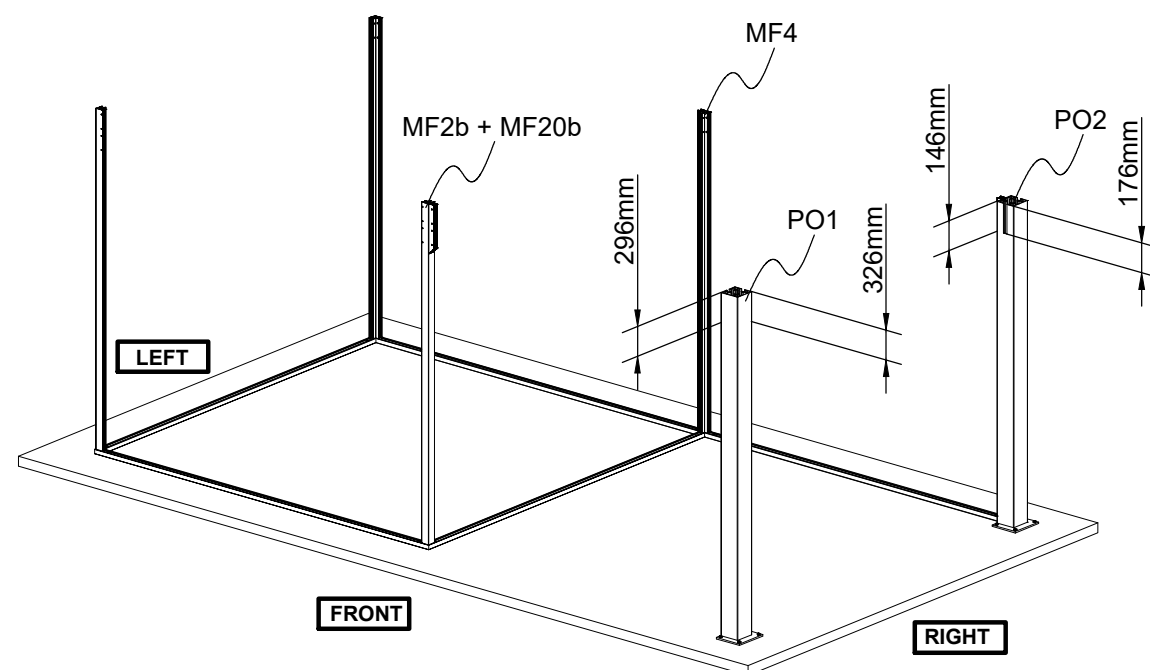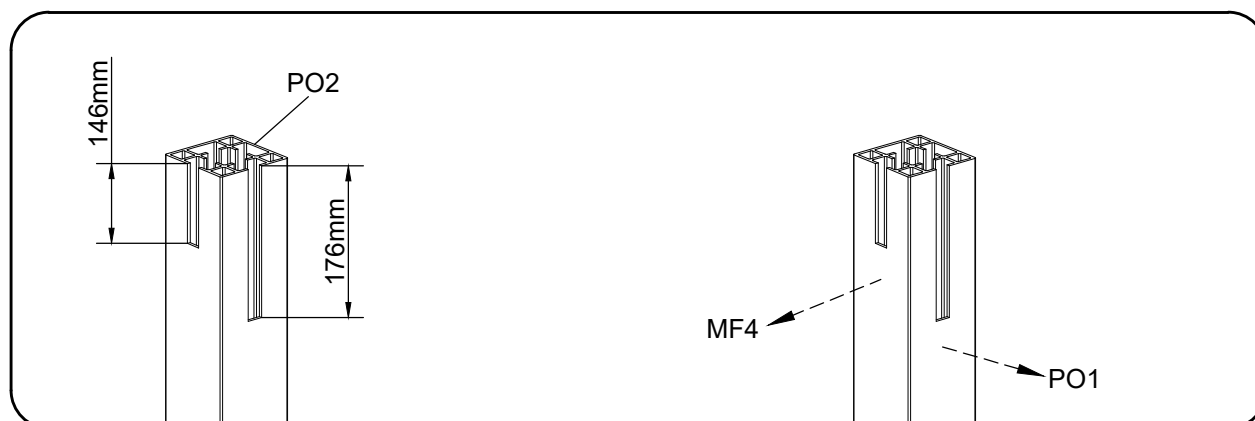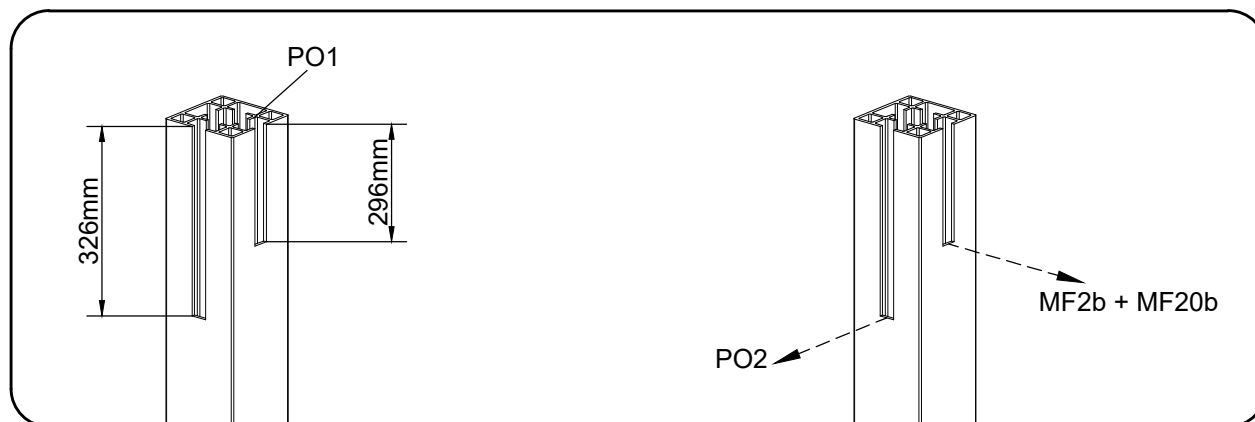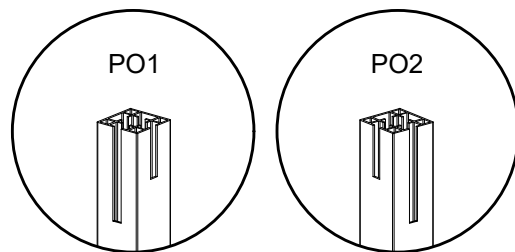


Please pre-drill holes first

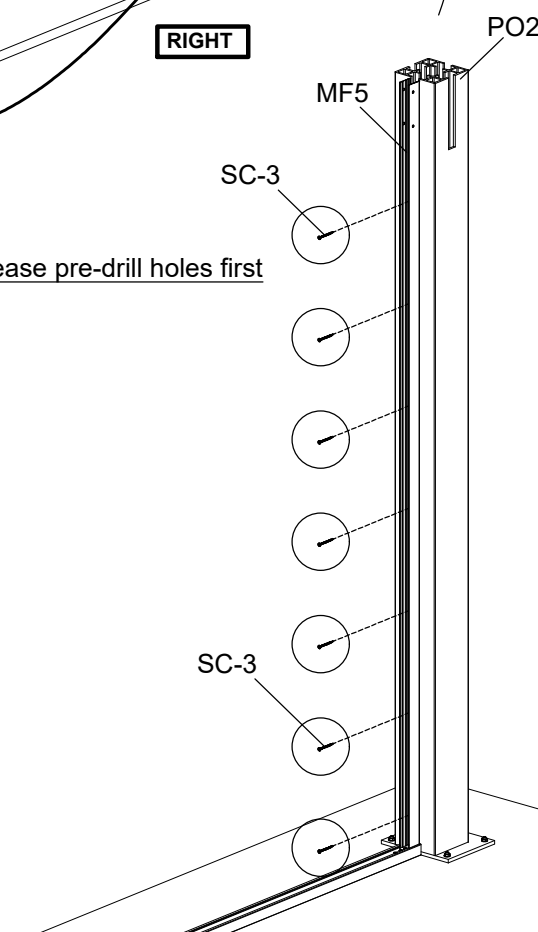


STEP 5 :

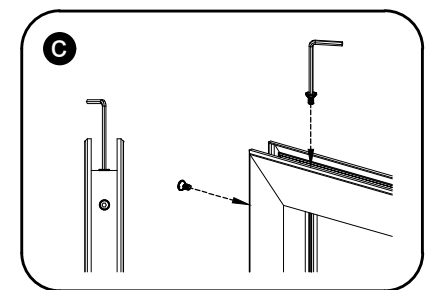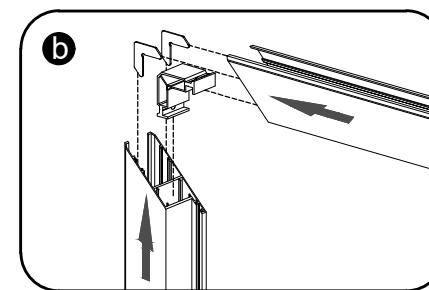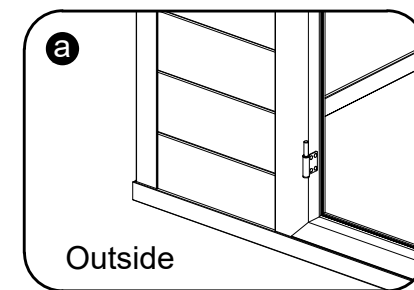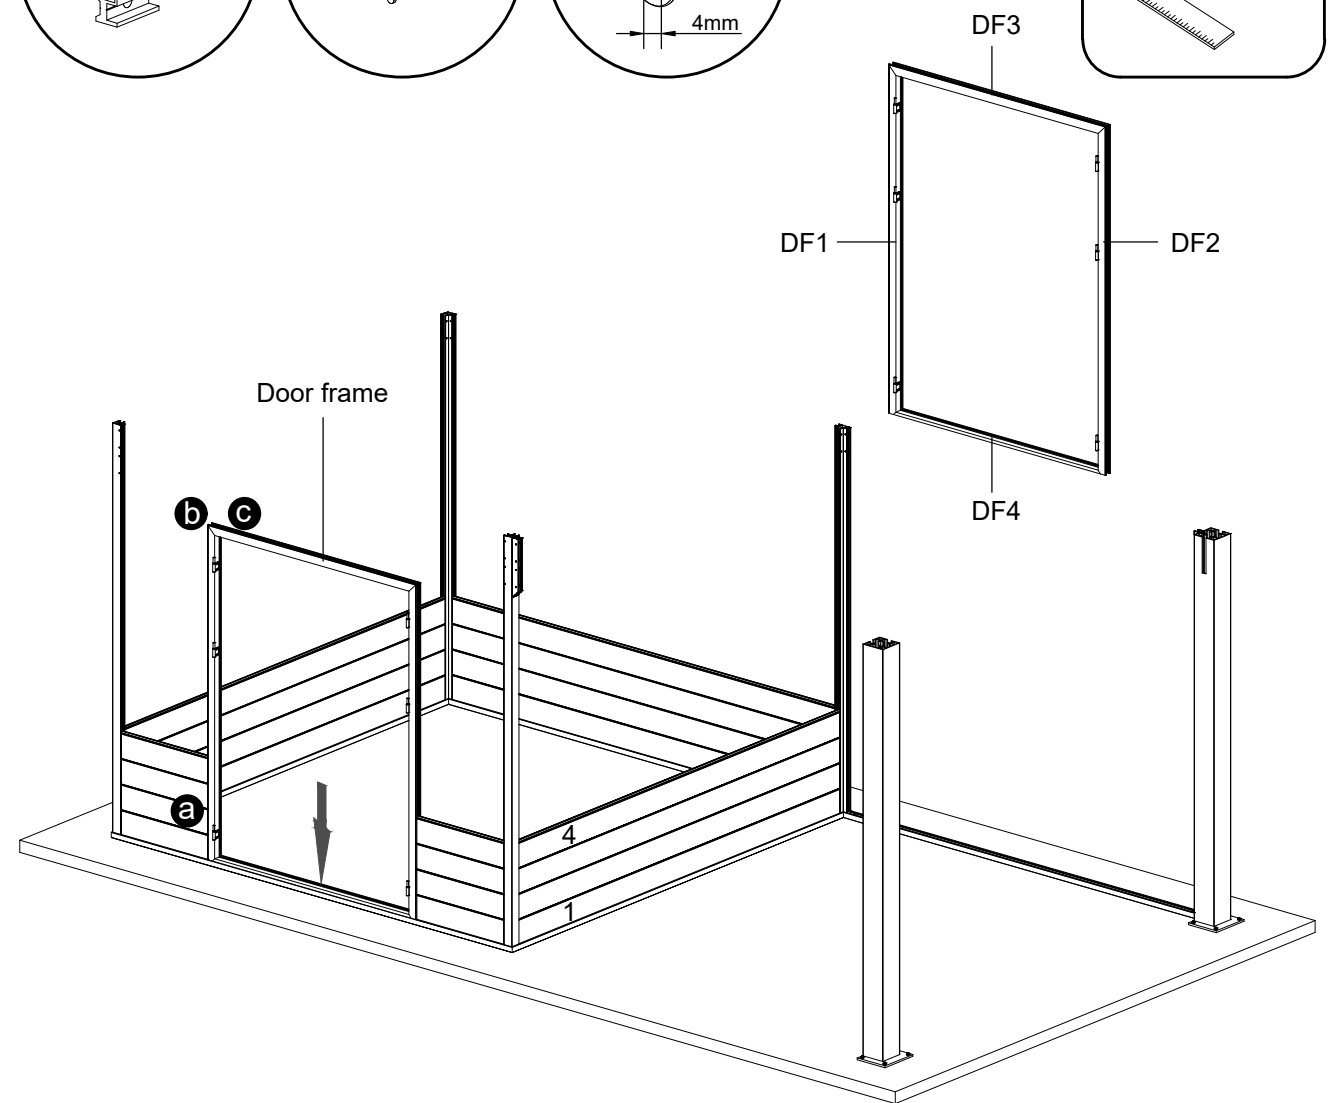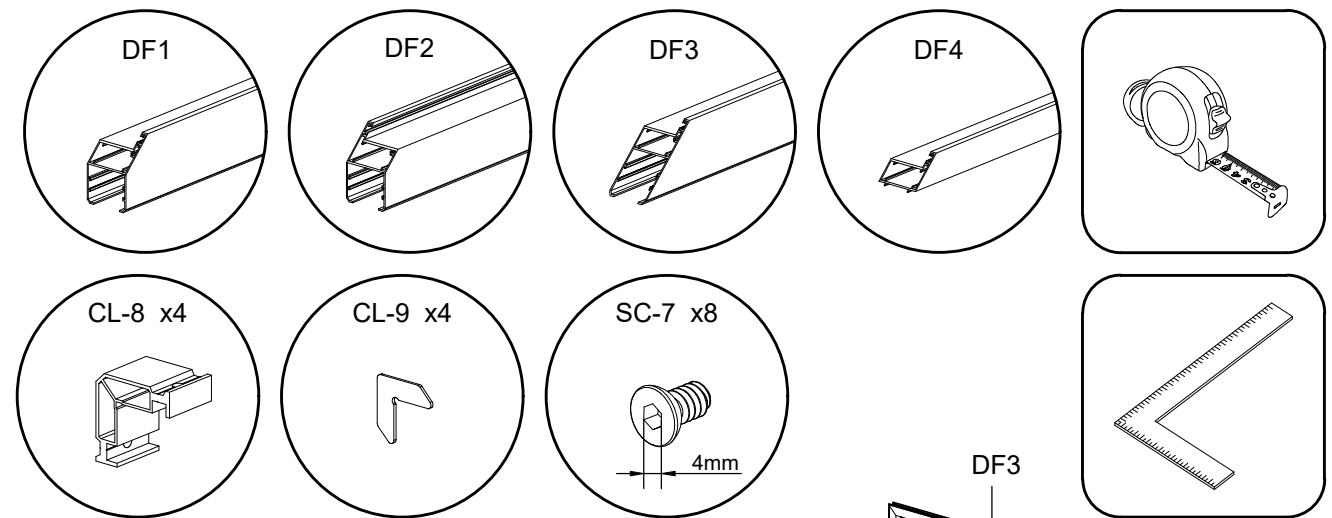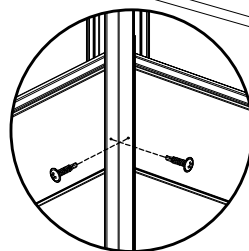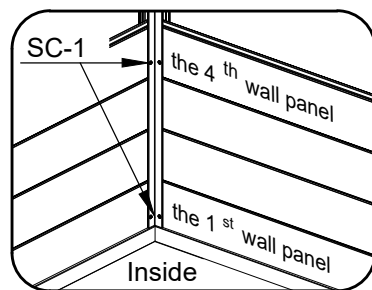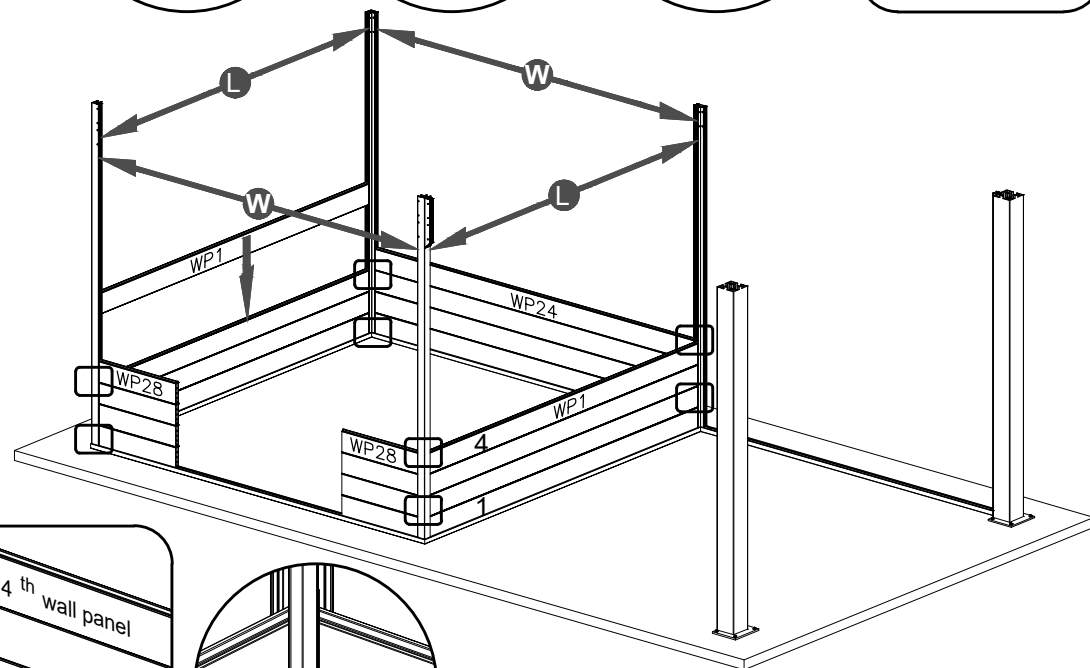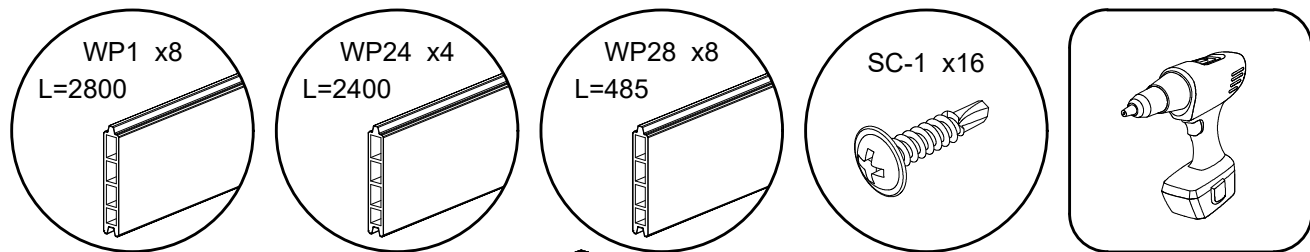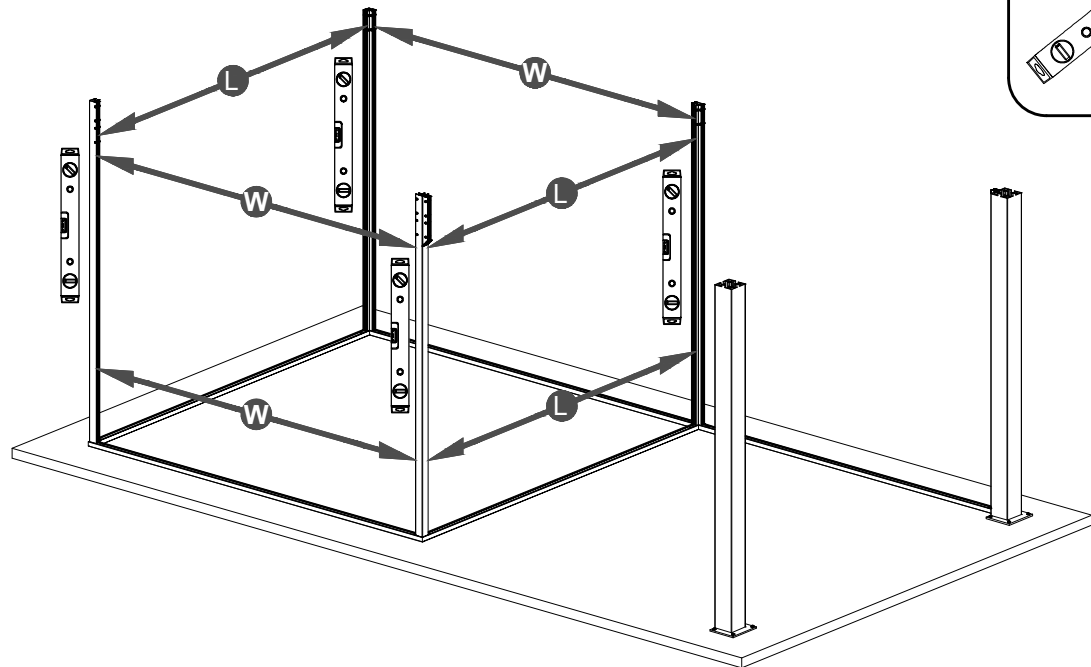






STEP 6 :

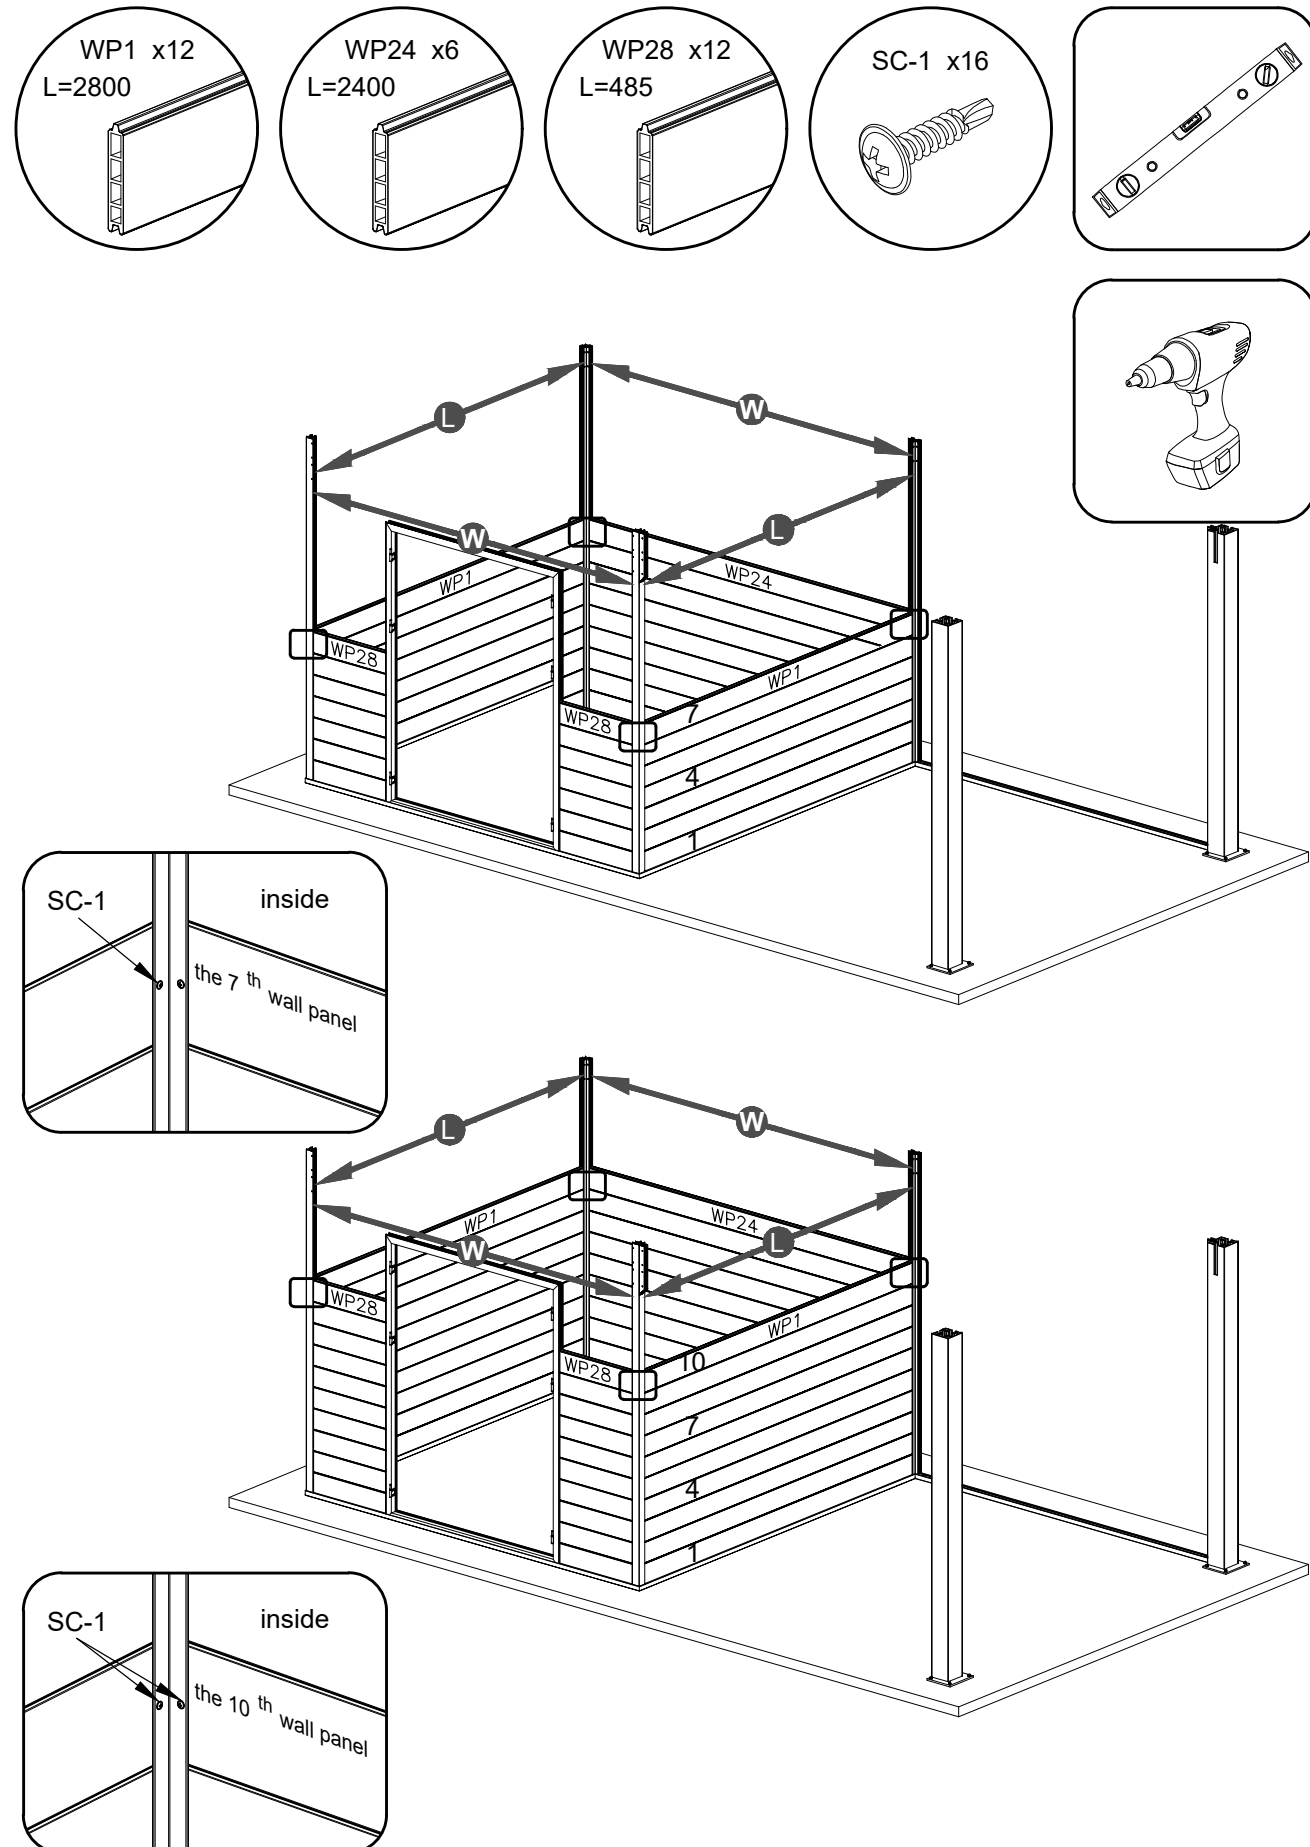


STEP 7 :

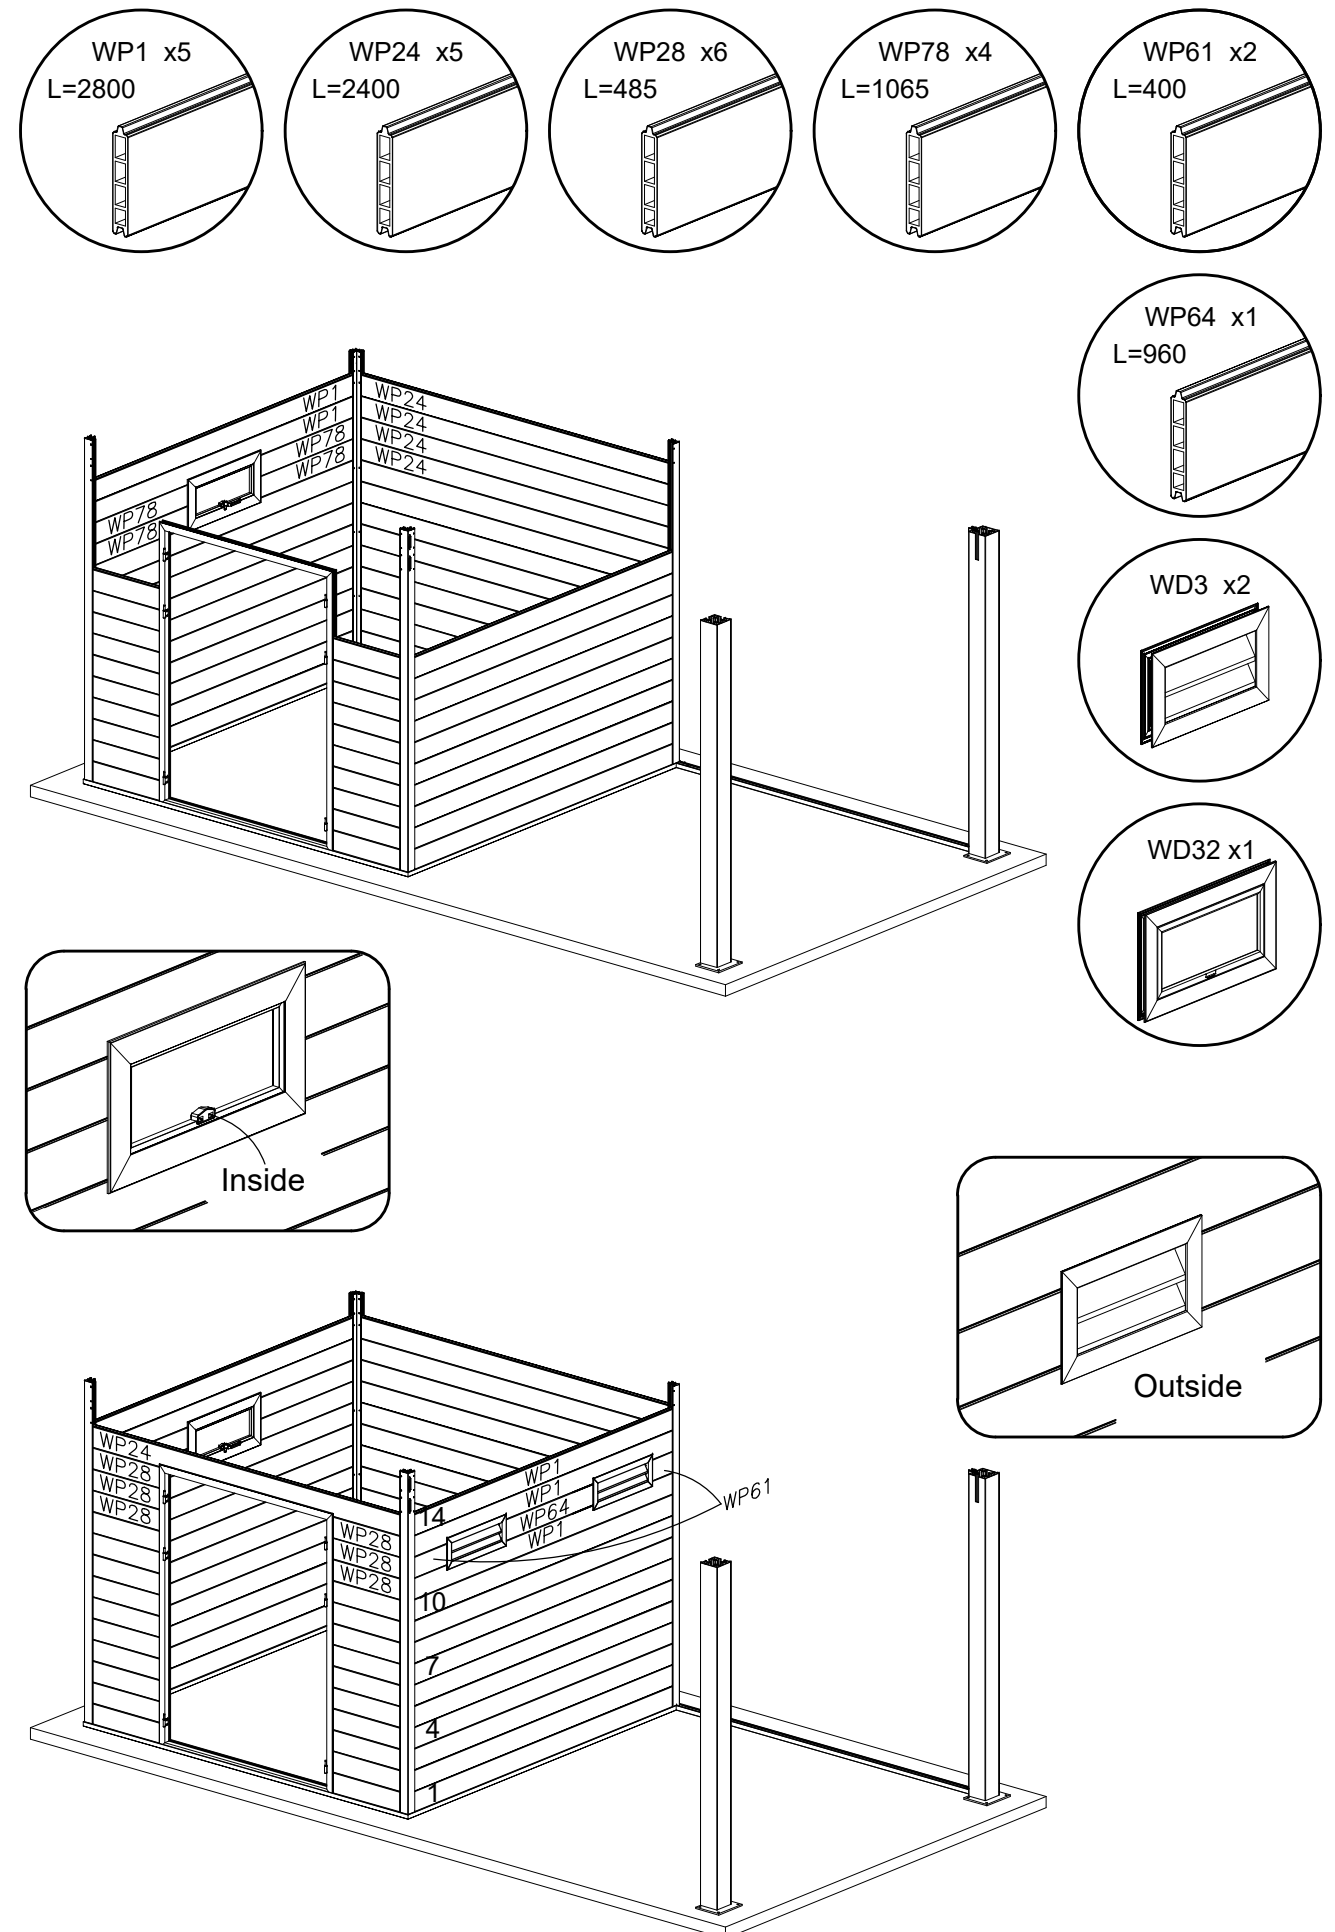


STEP 8 :

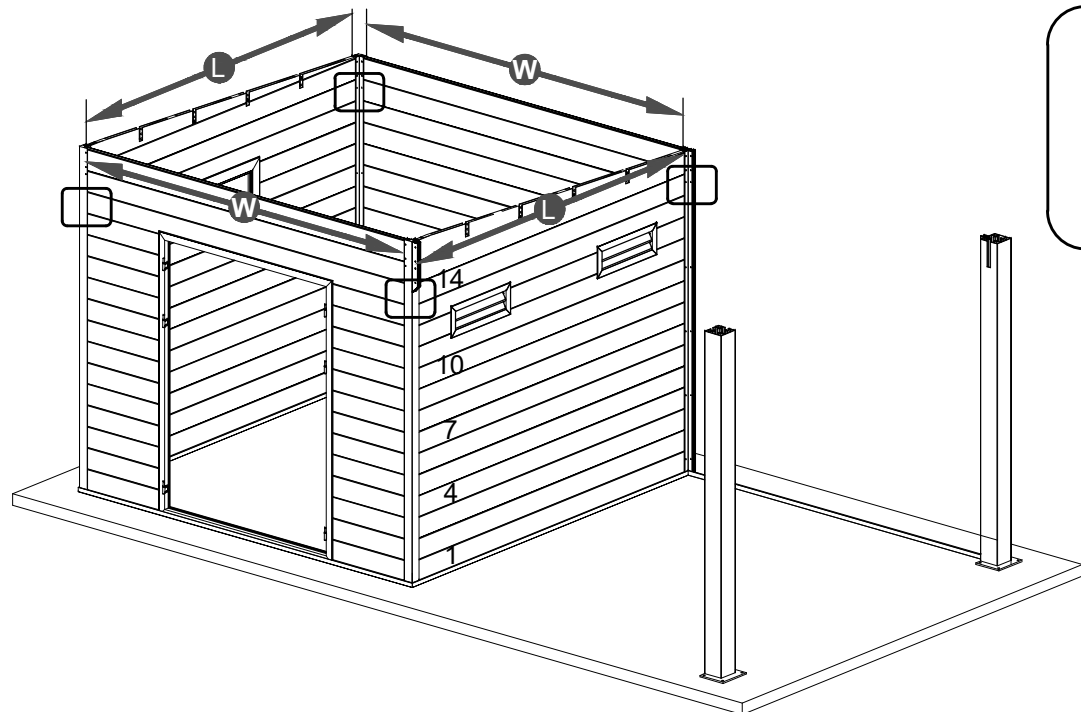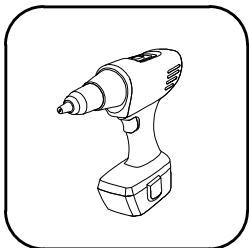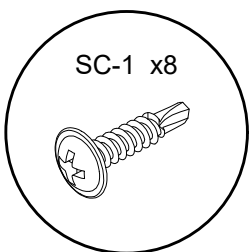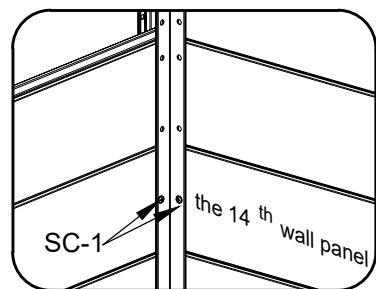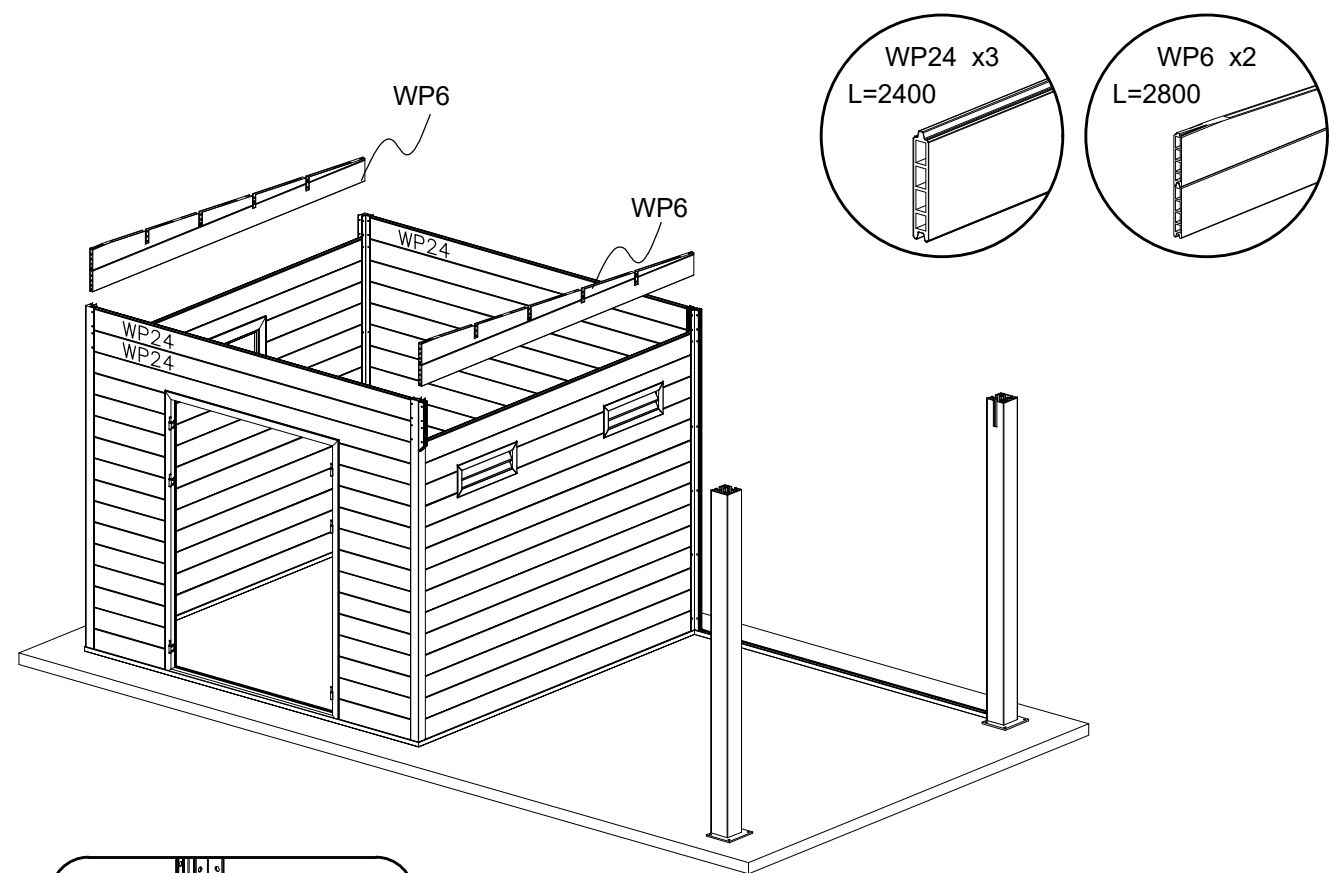


STEP 9 :

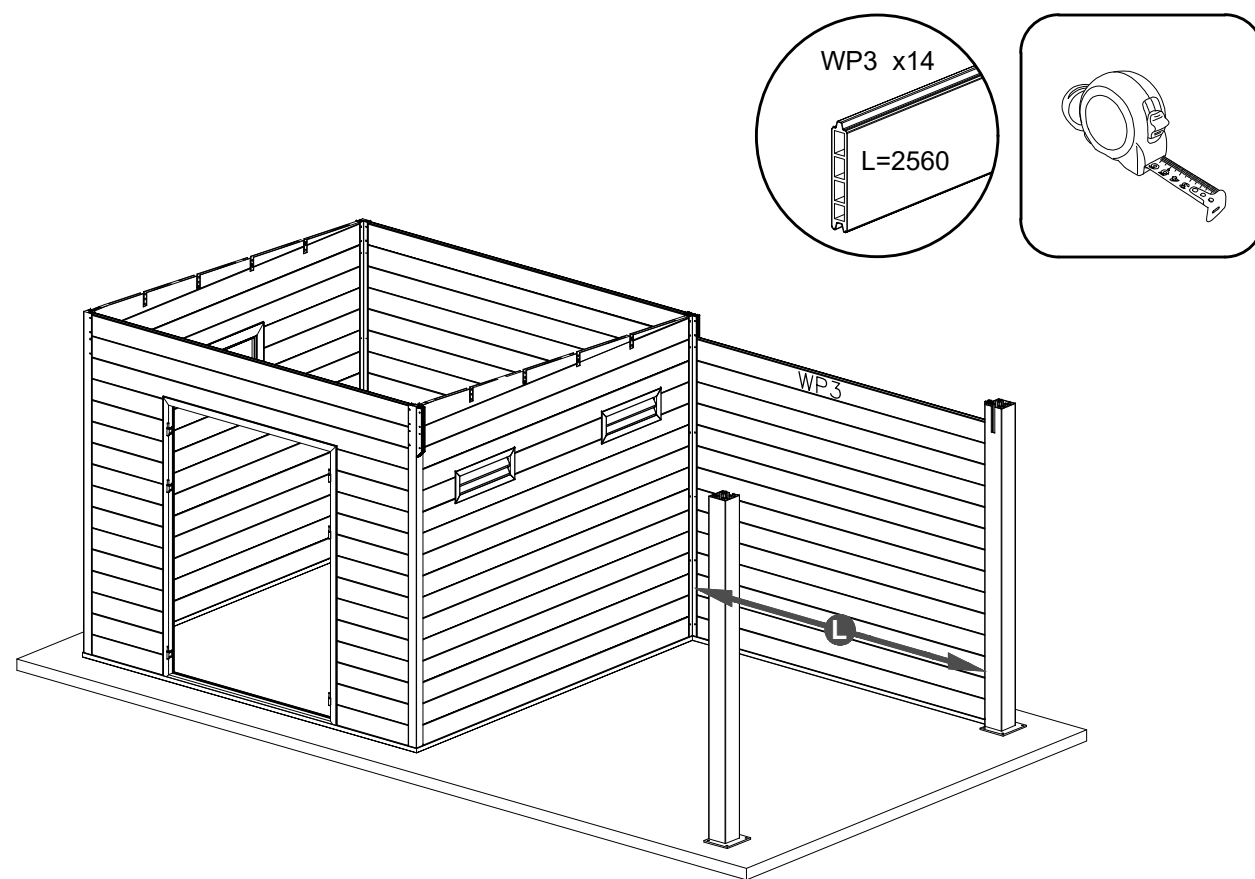


STEP 10 :

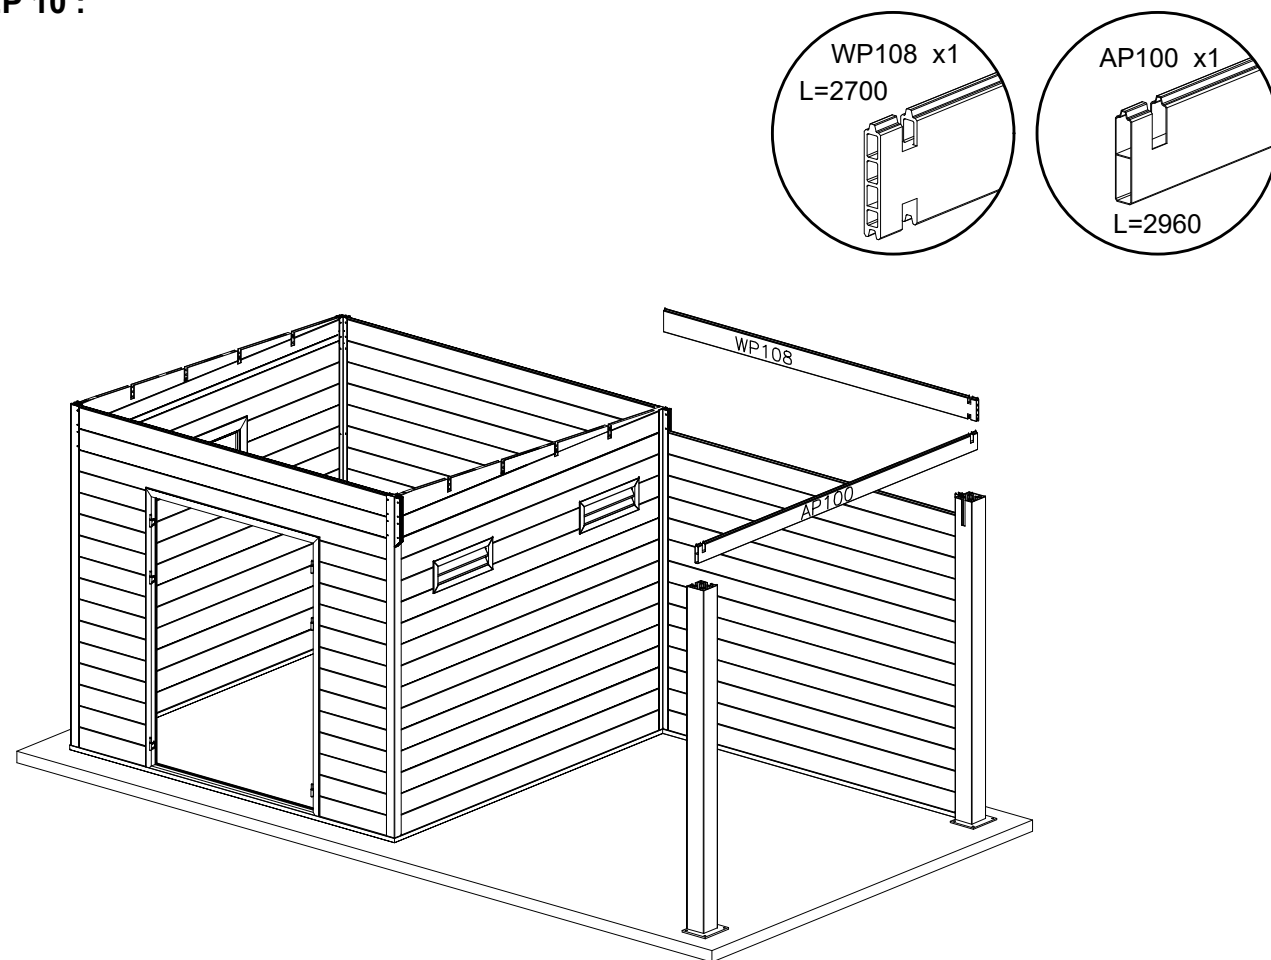



STEP 11 :

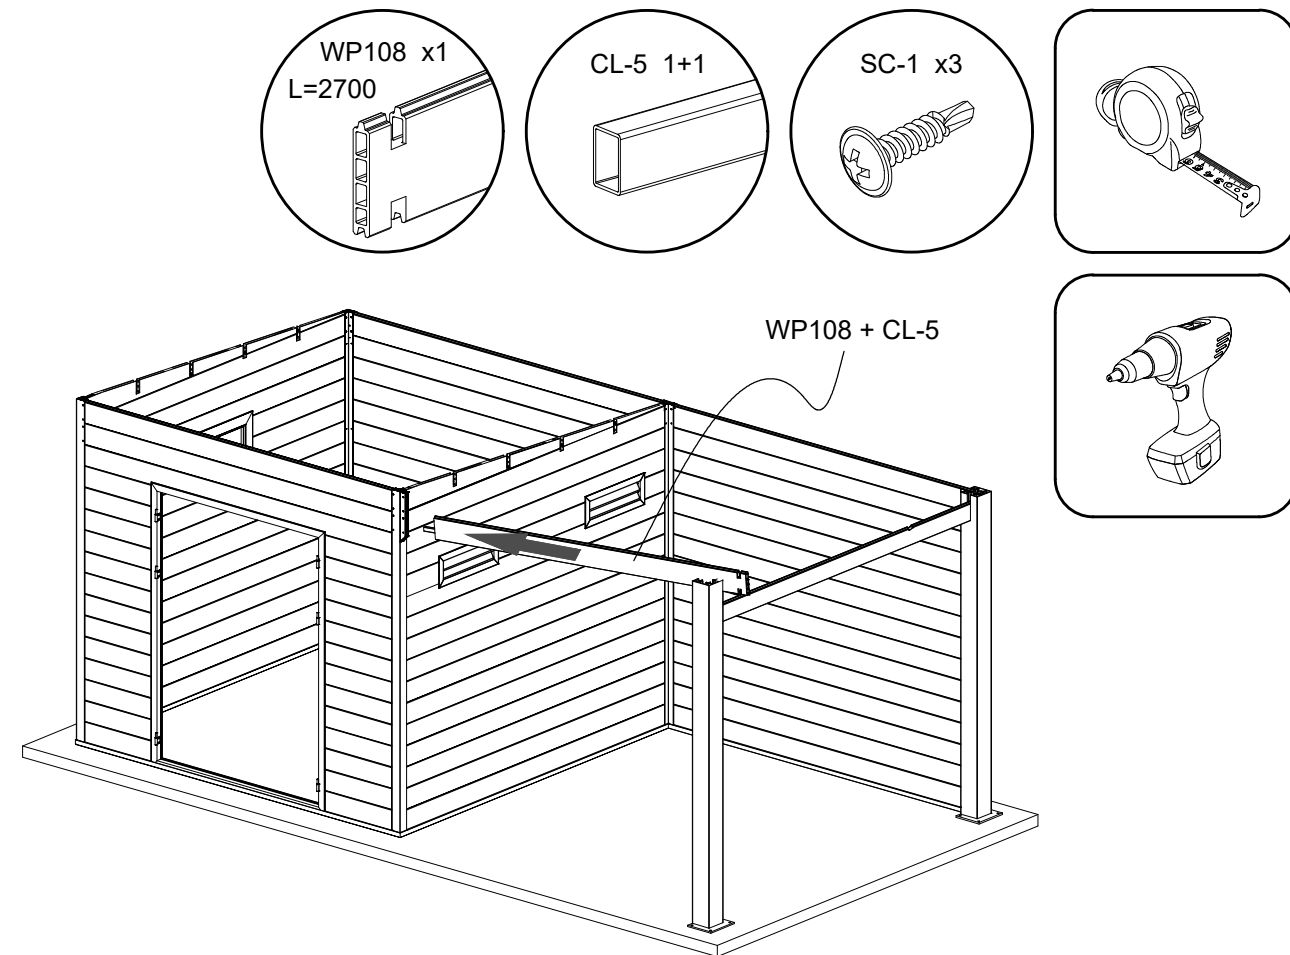

Detail:



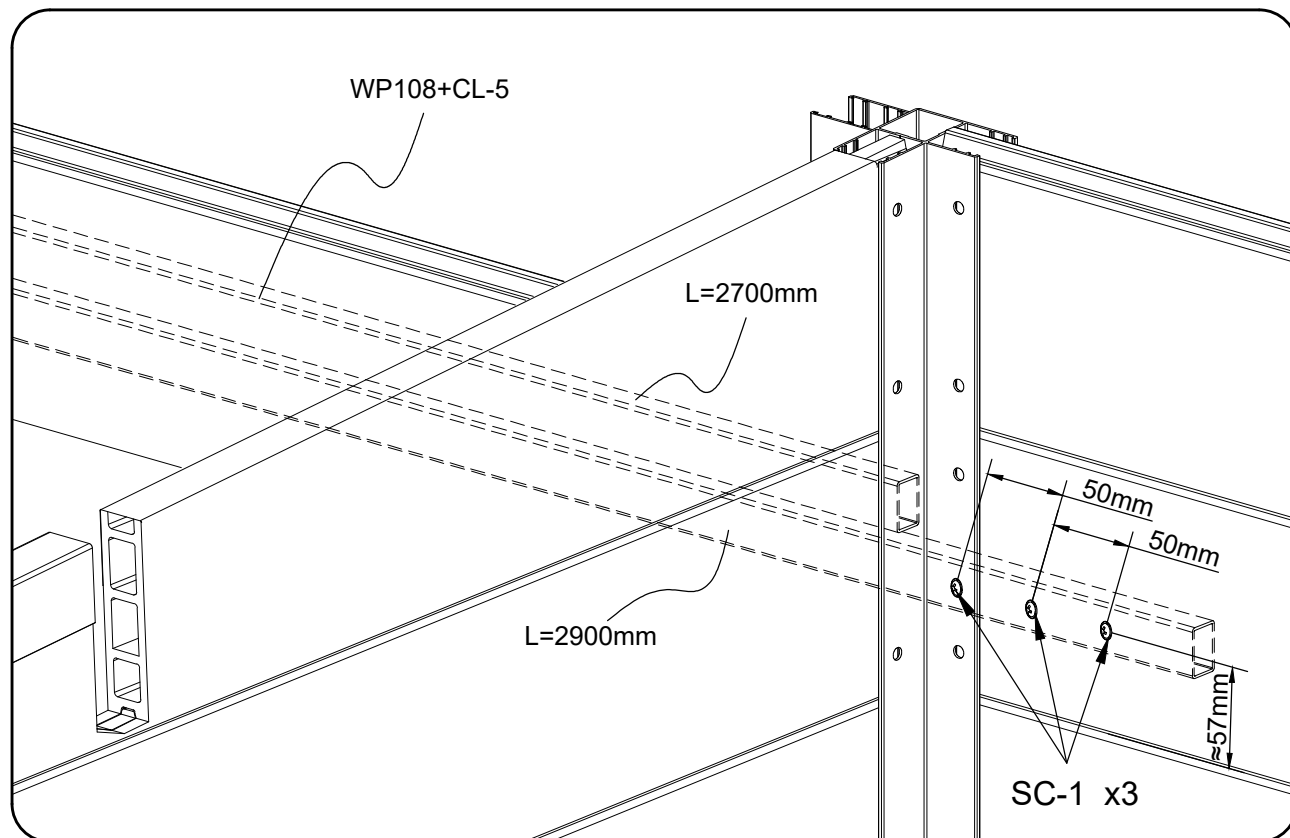


STEP 12 :

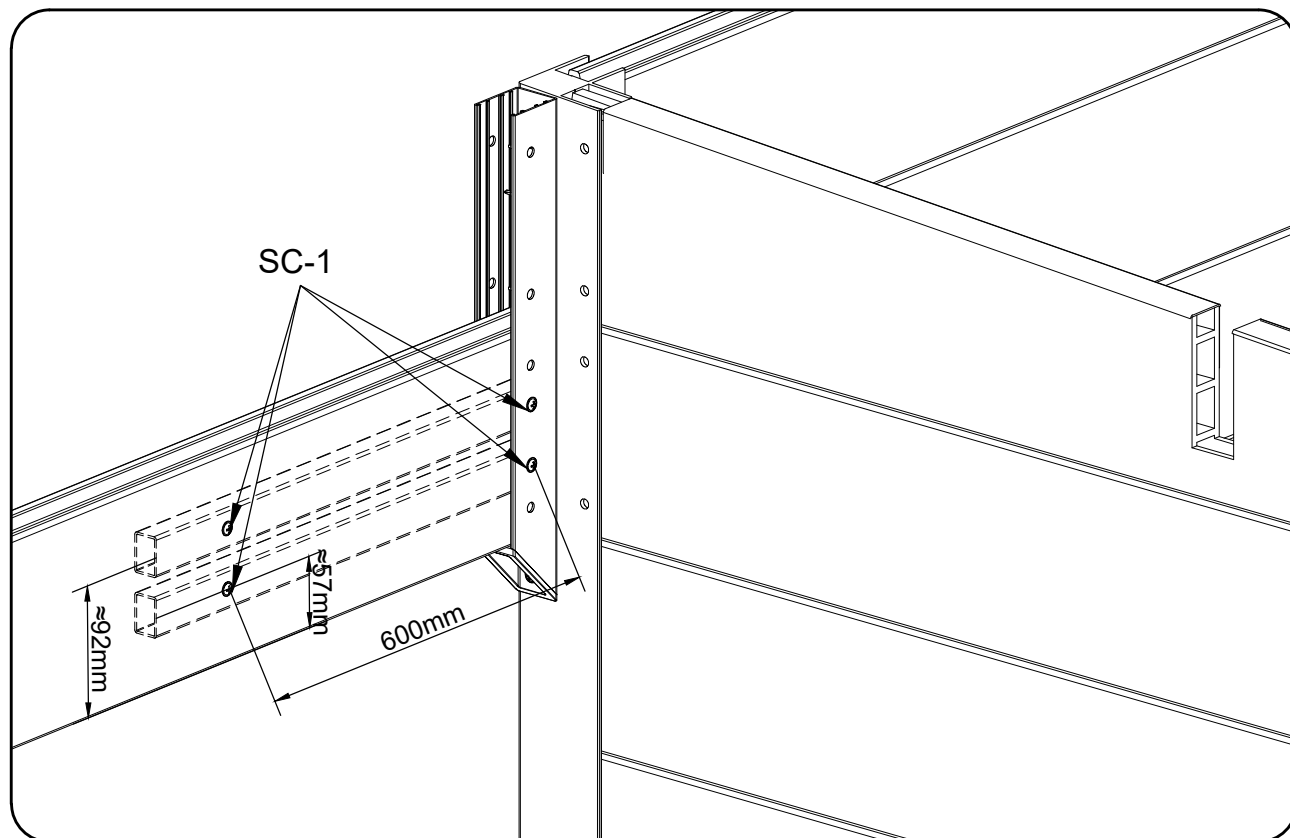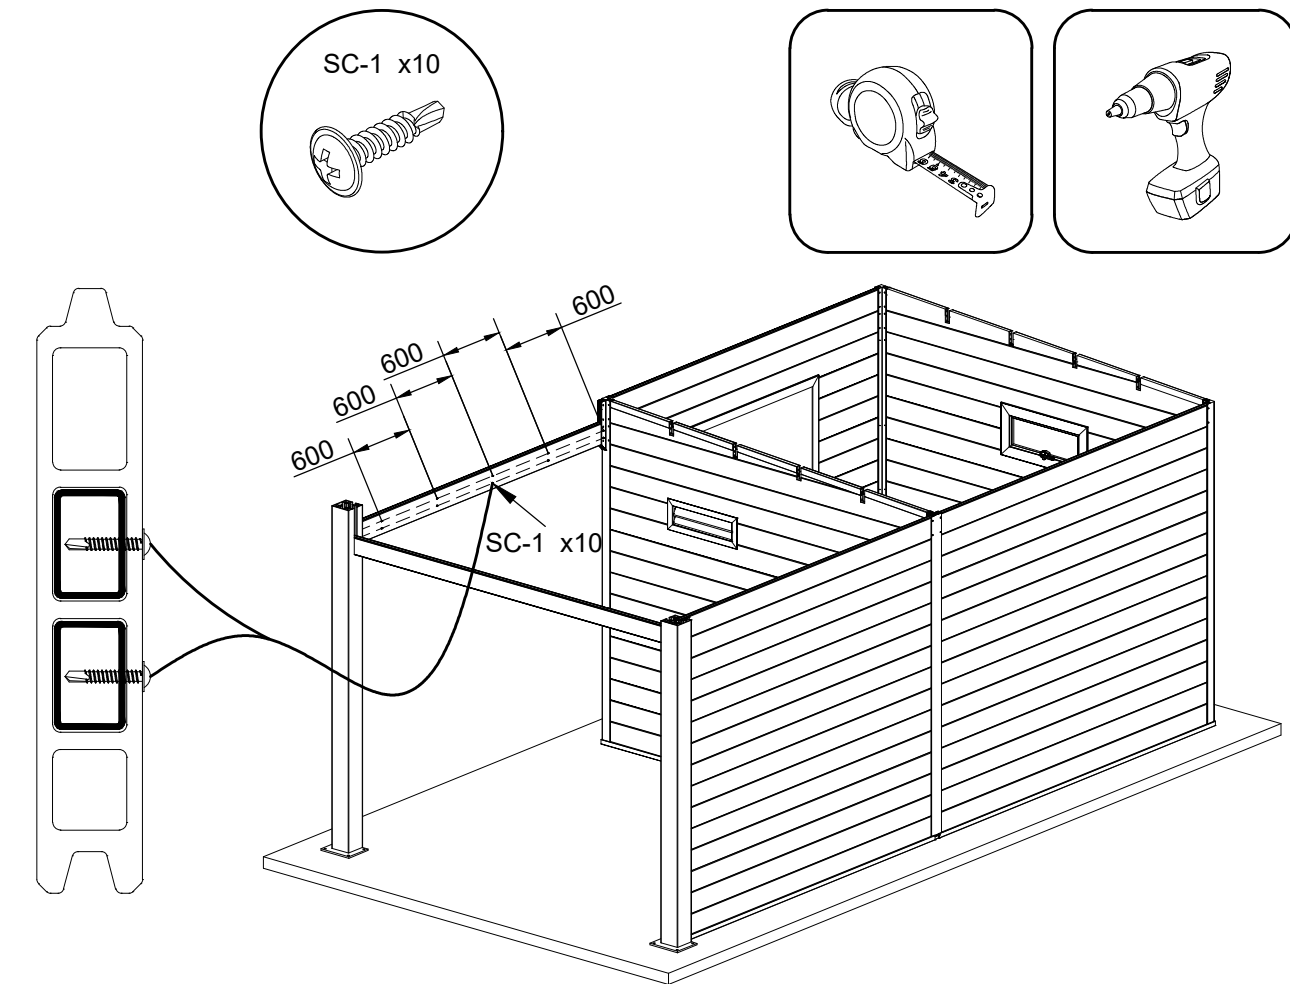


STEP 13 :





WP99K + UC307-2, 4, 5 x1

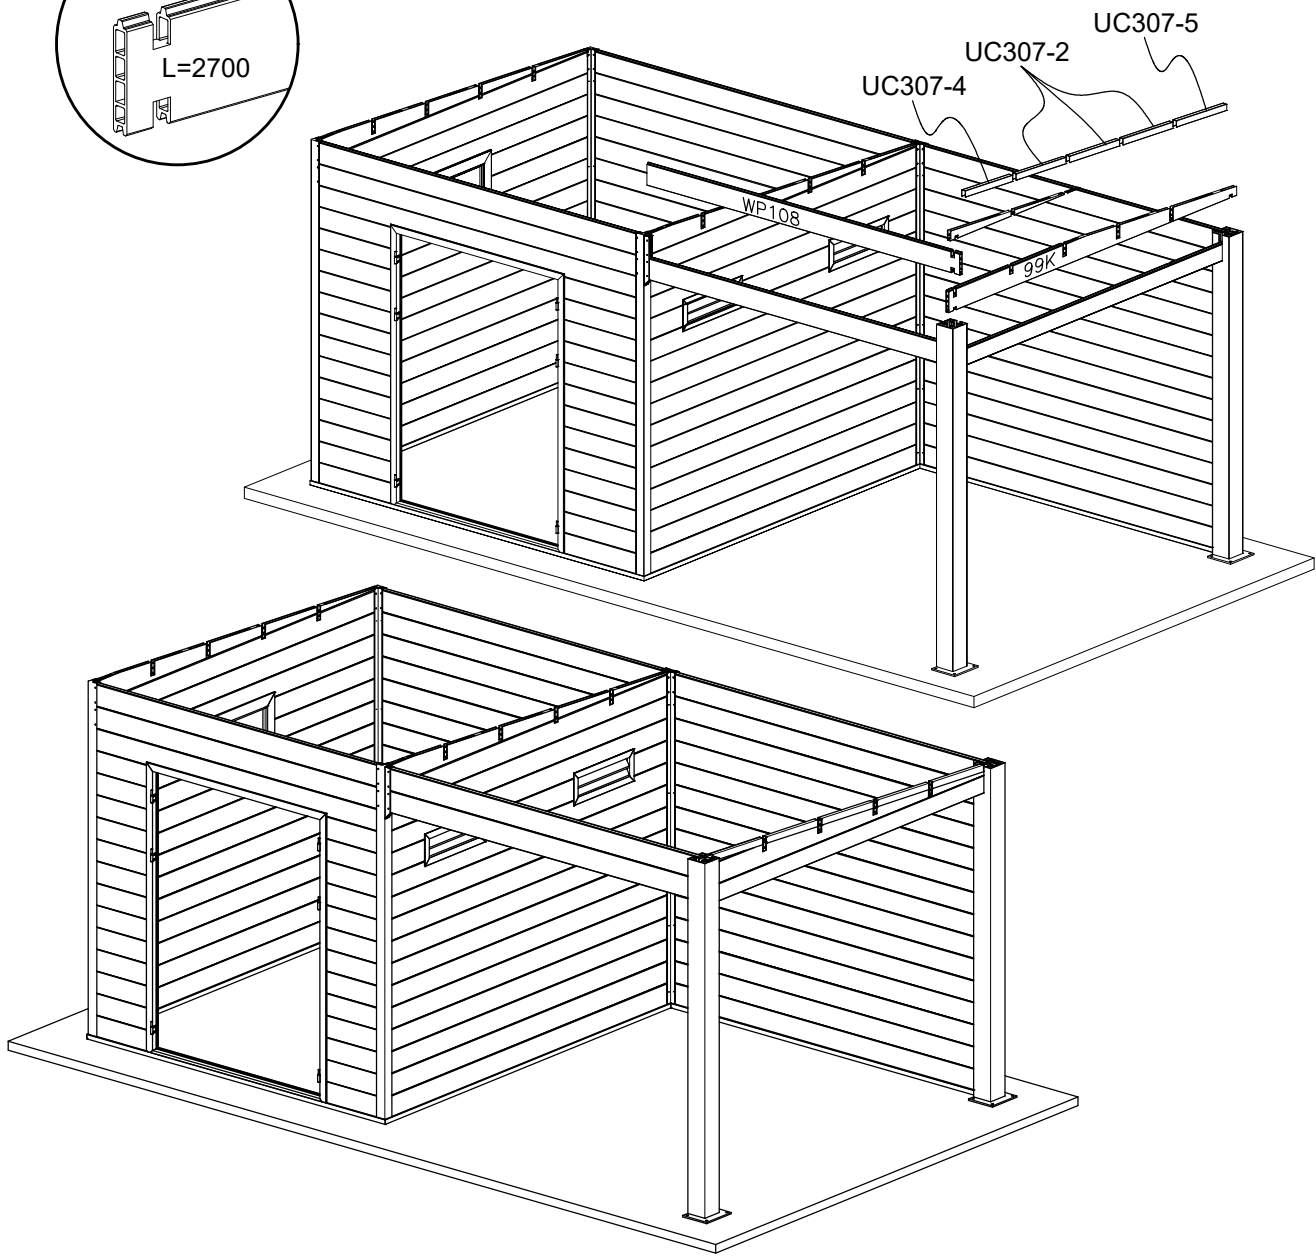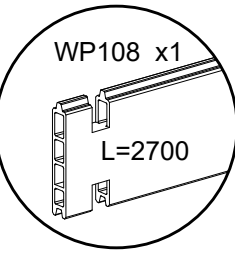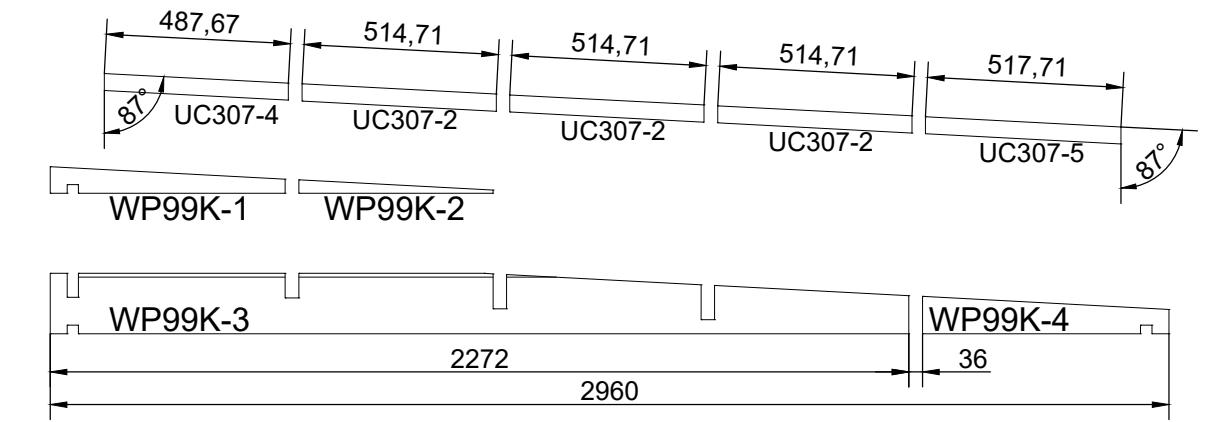


STEP 14 :

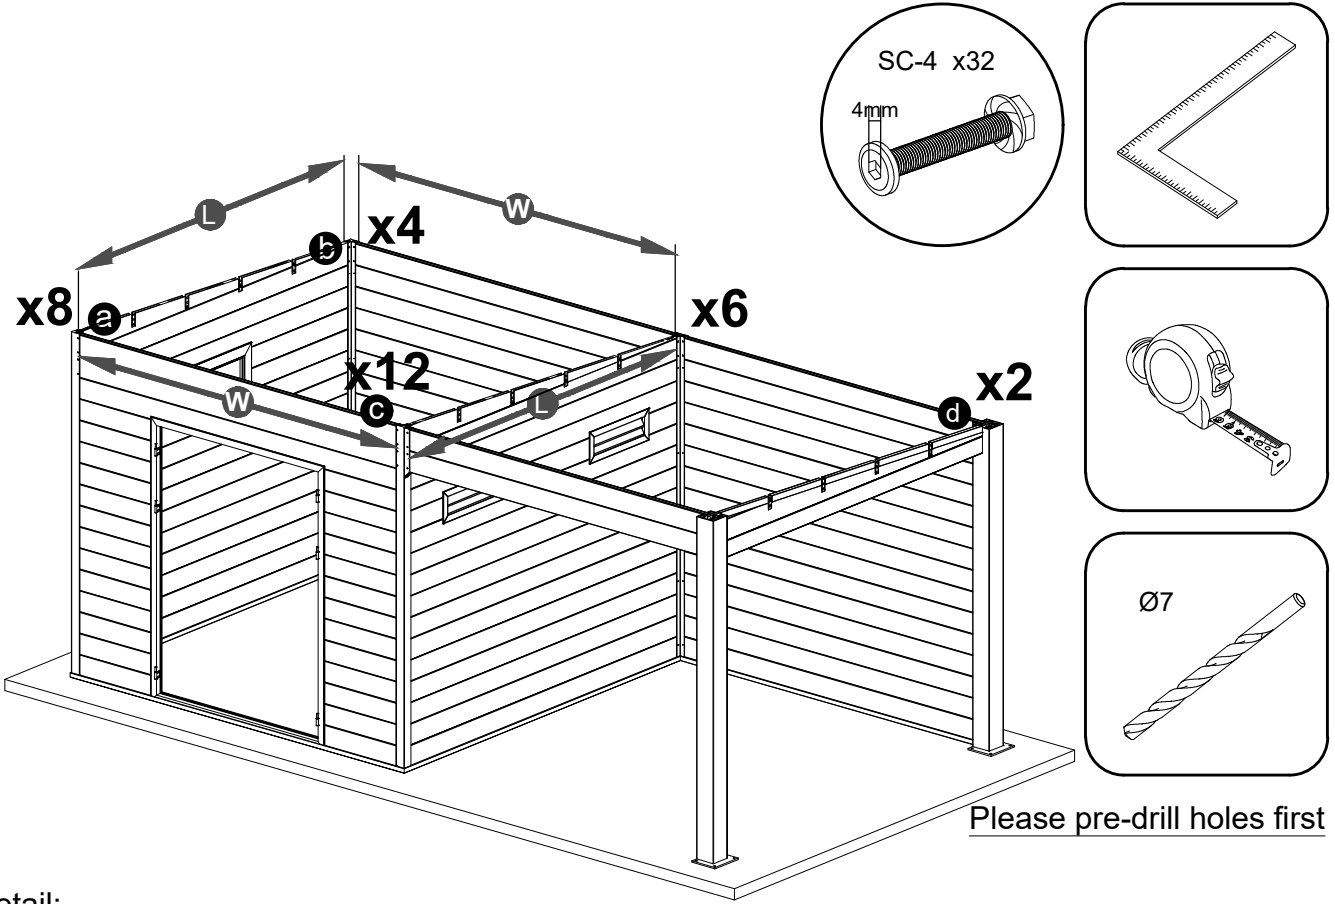


Detail:

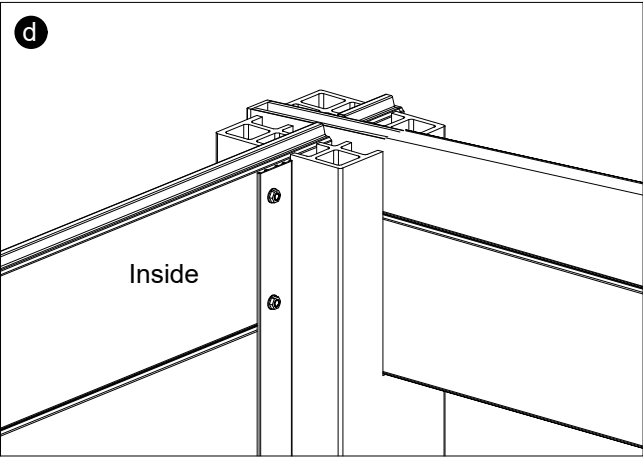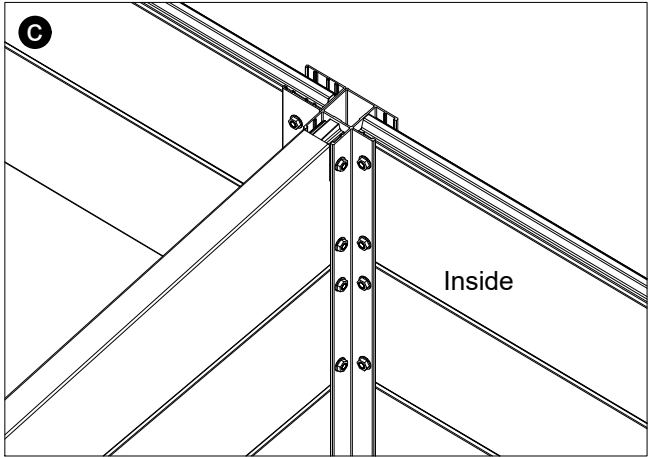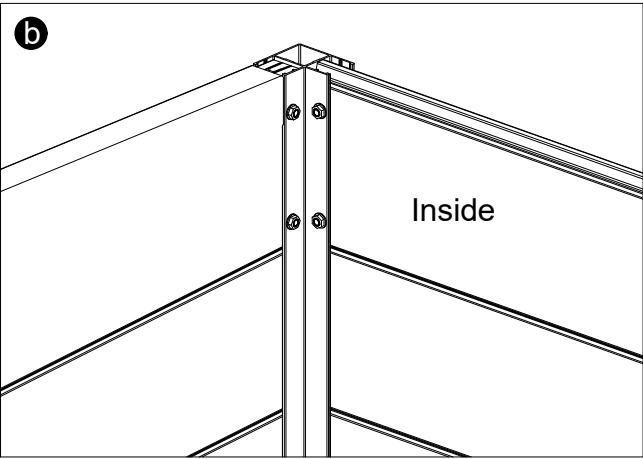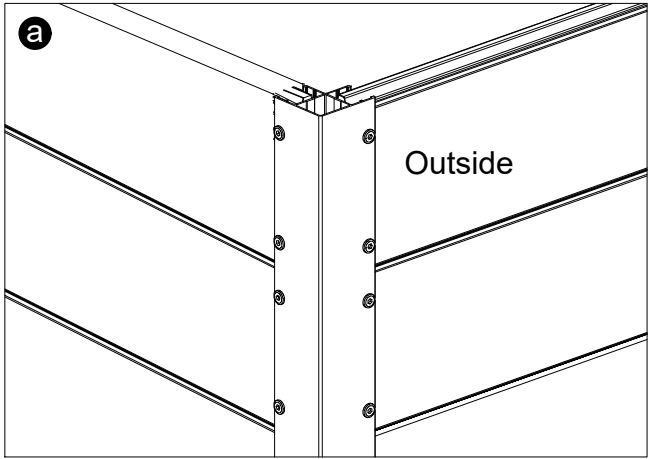



STEP 15 :

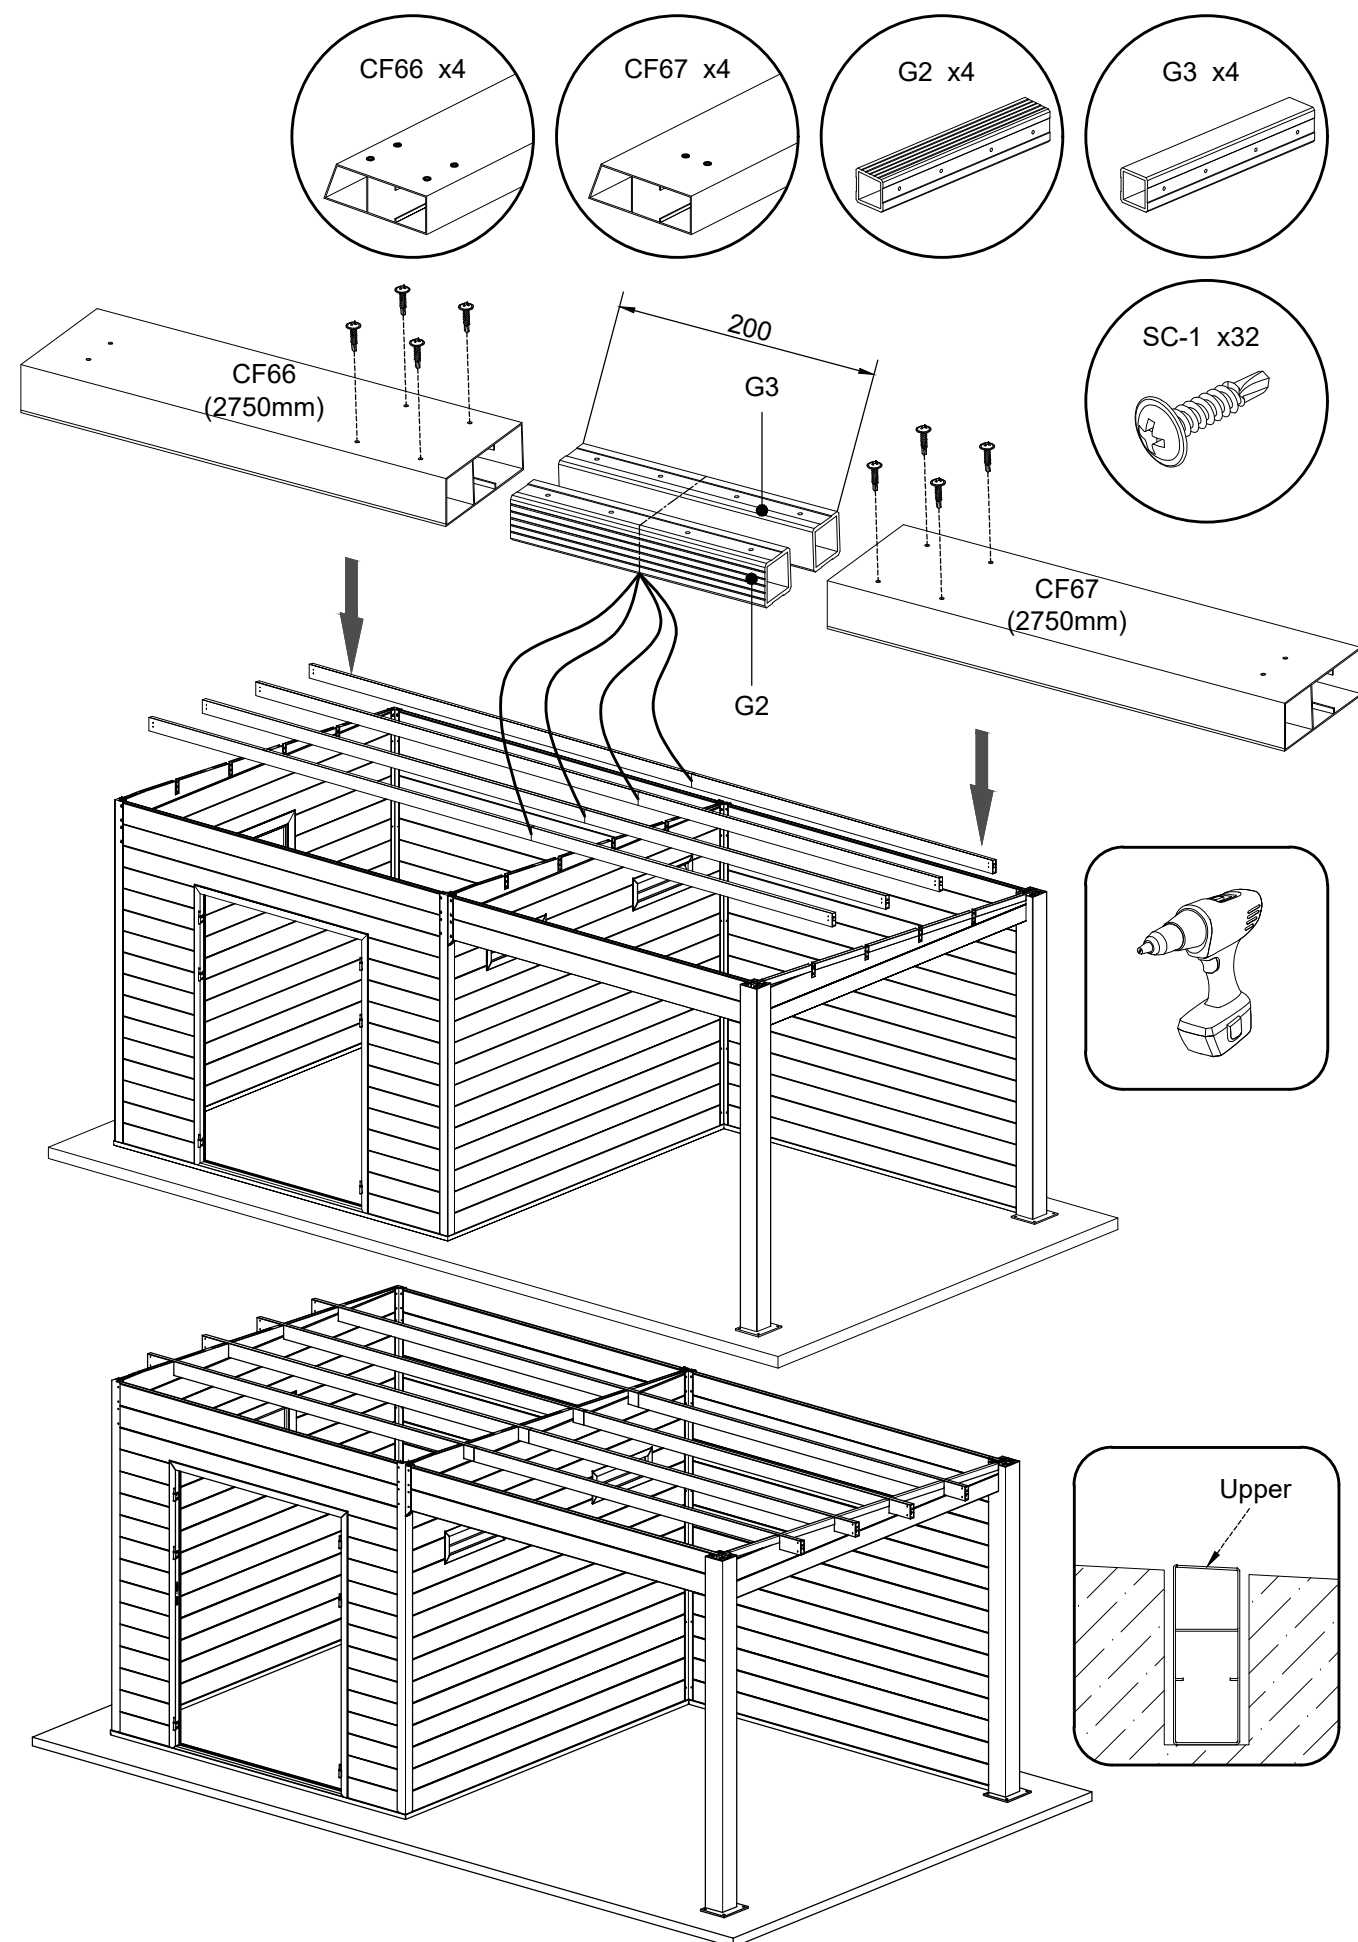

STEP 16 :




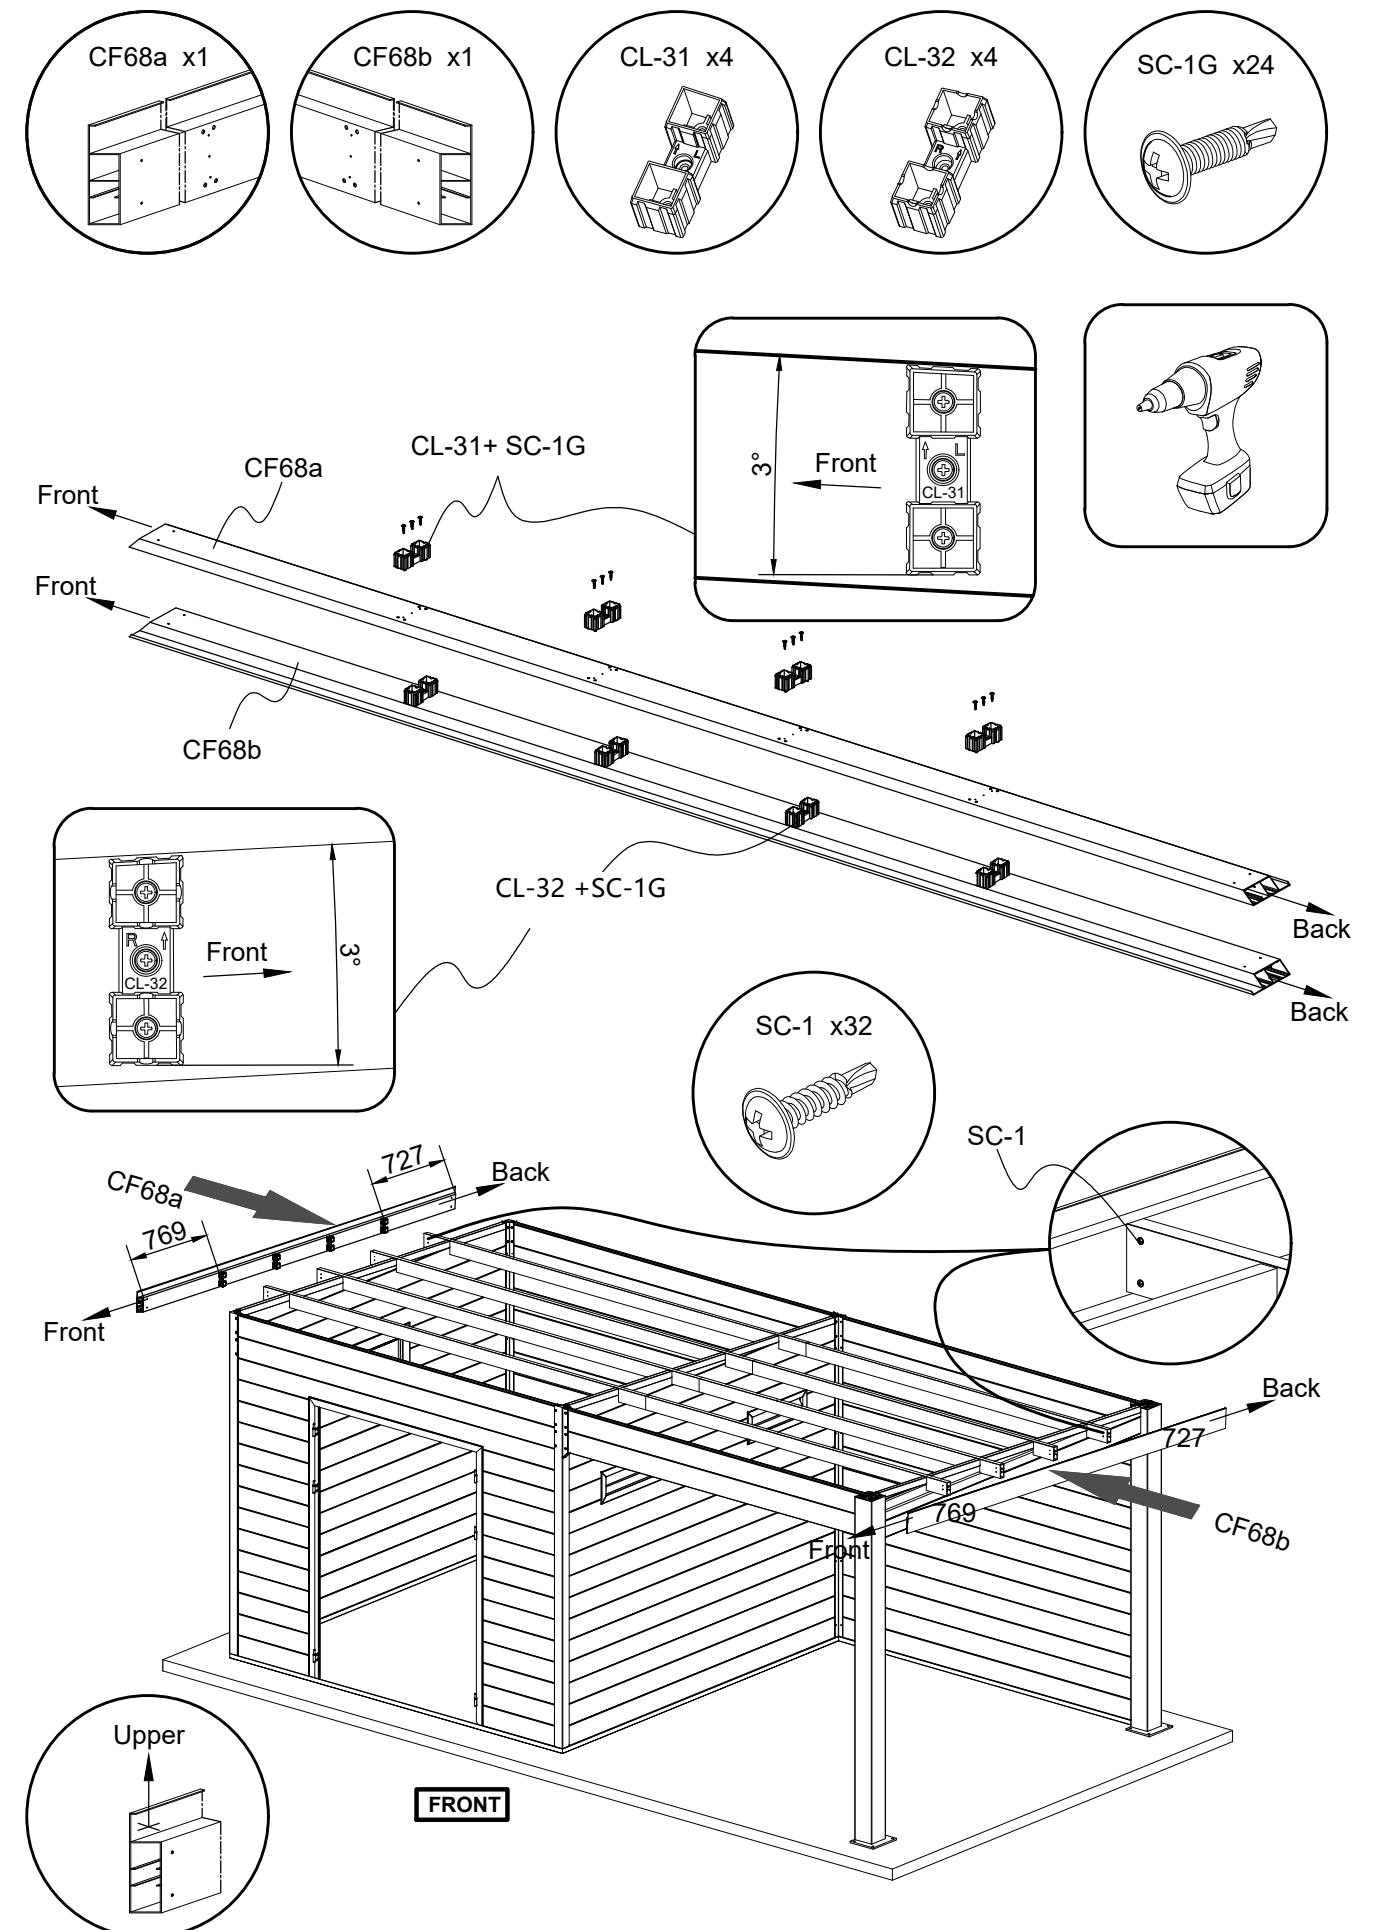


STEP 17 :




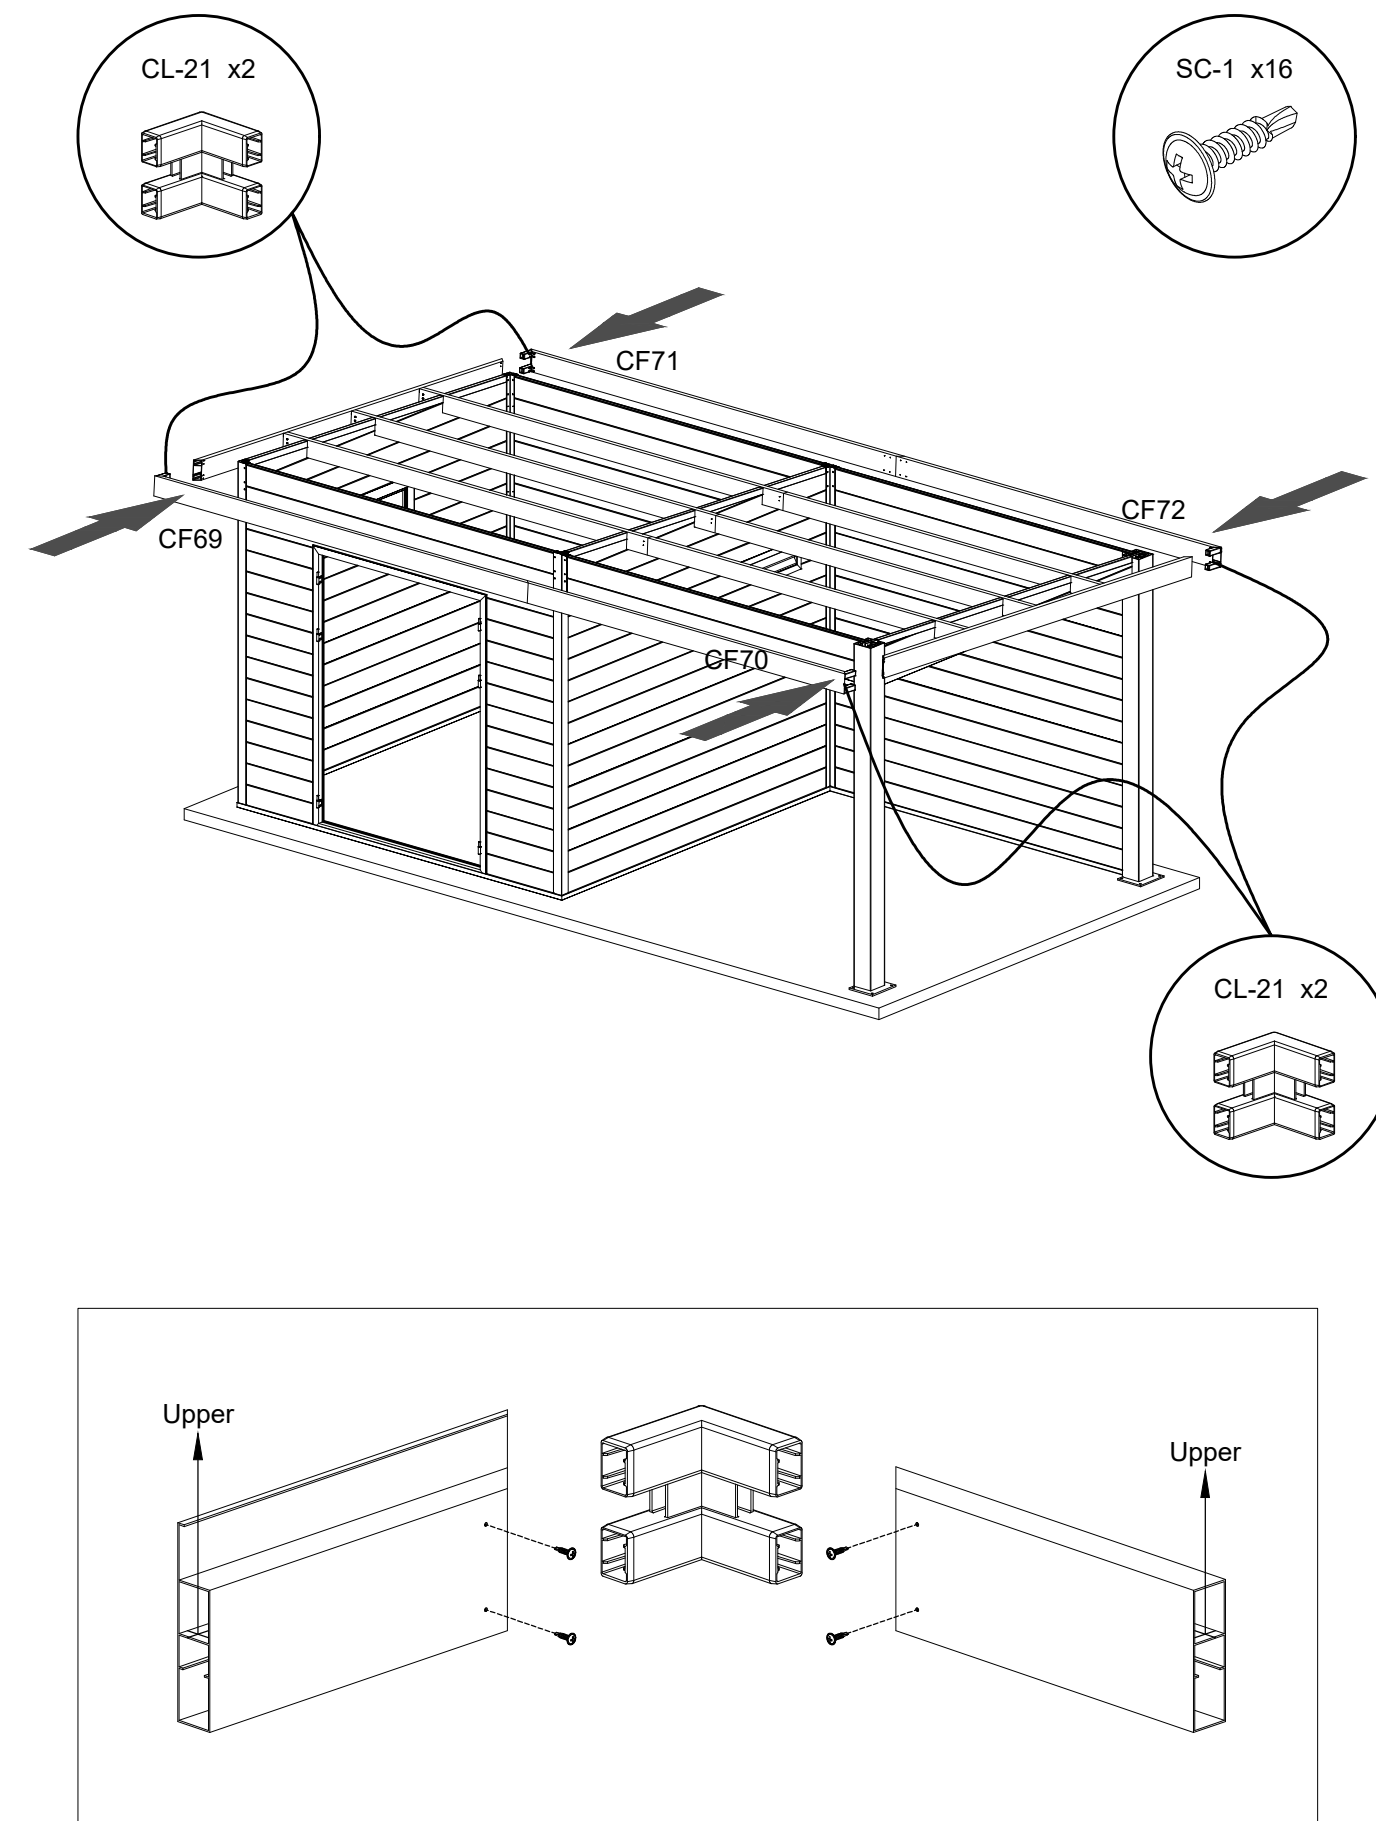
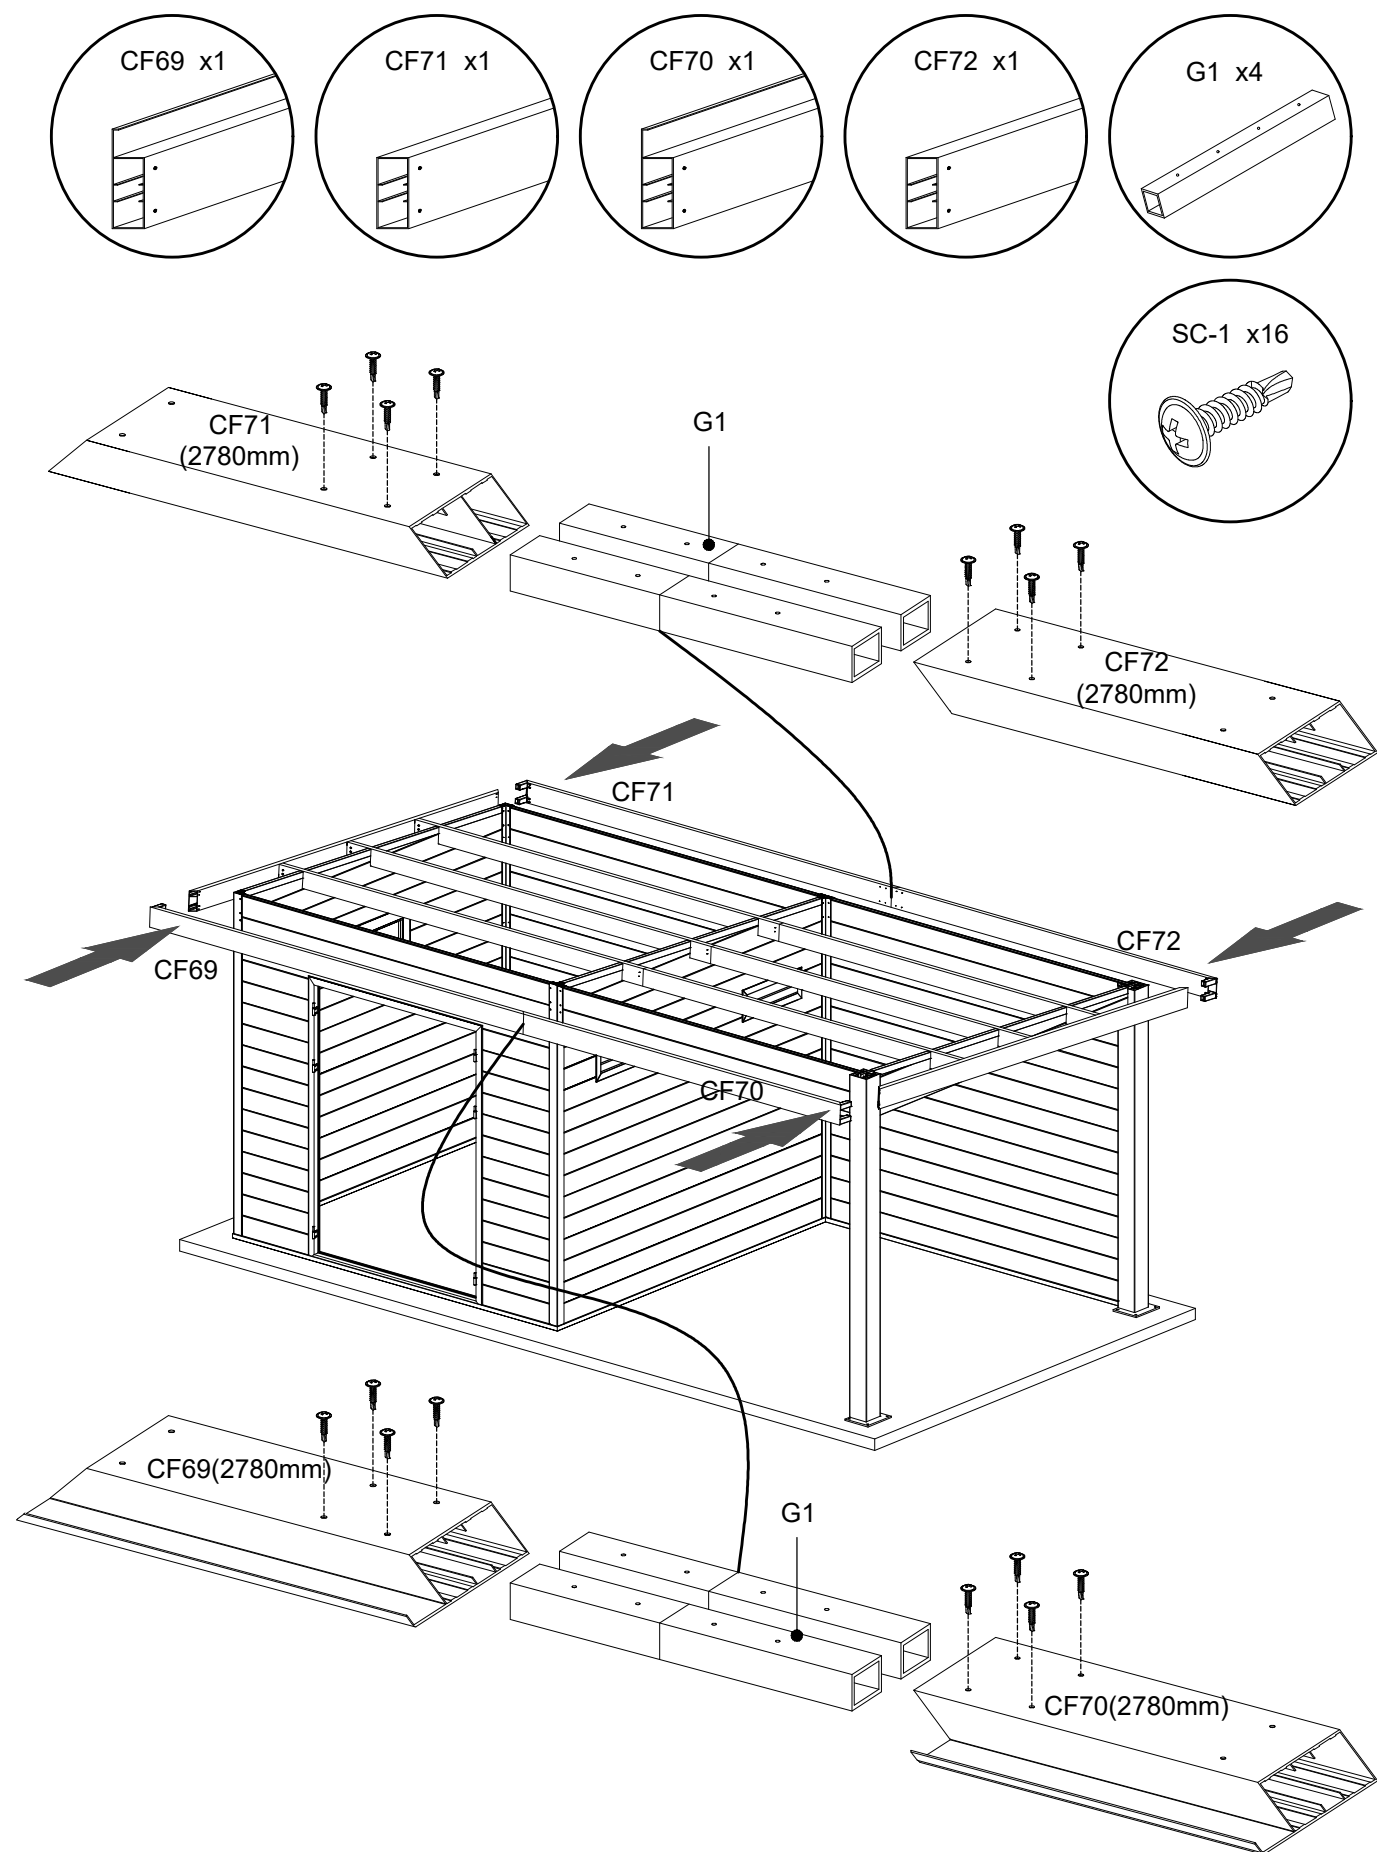


STEP 18 : Connecting Together


A=B=225mm

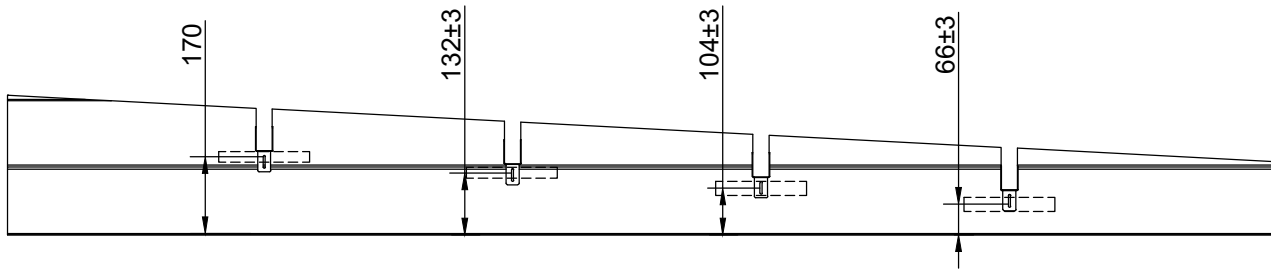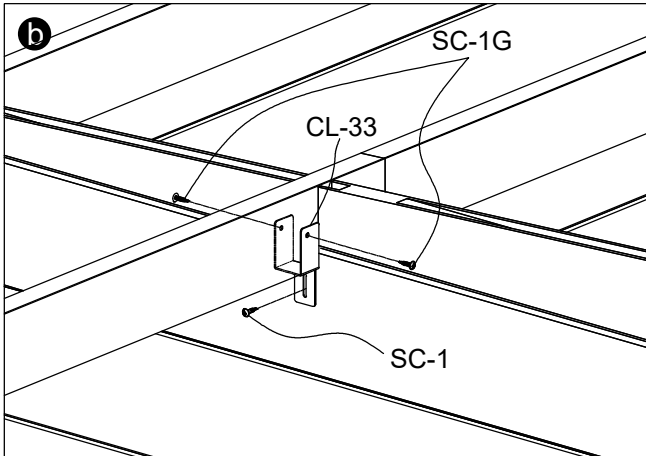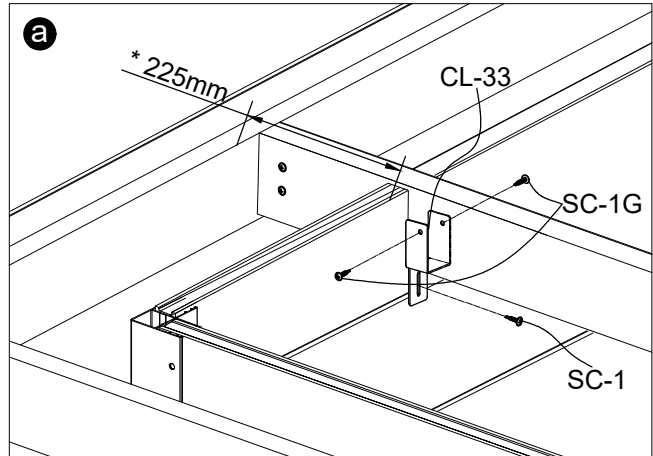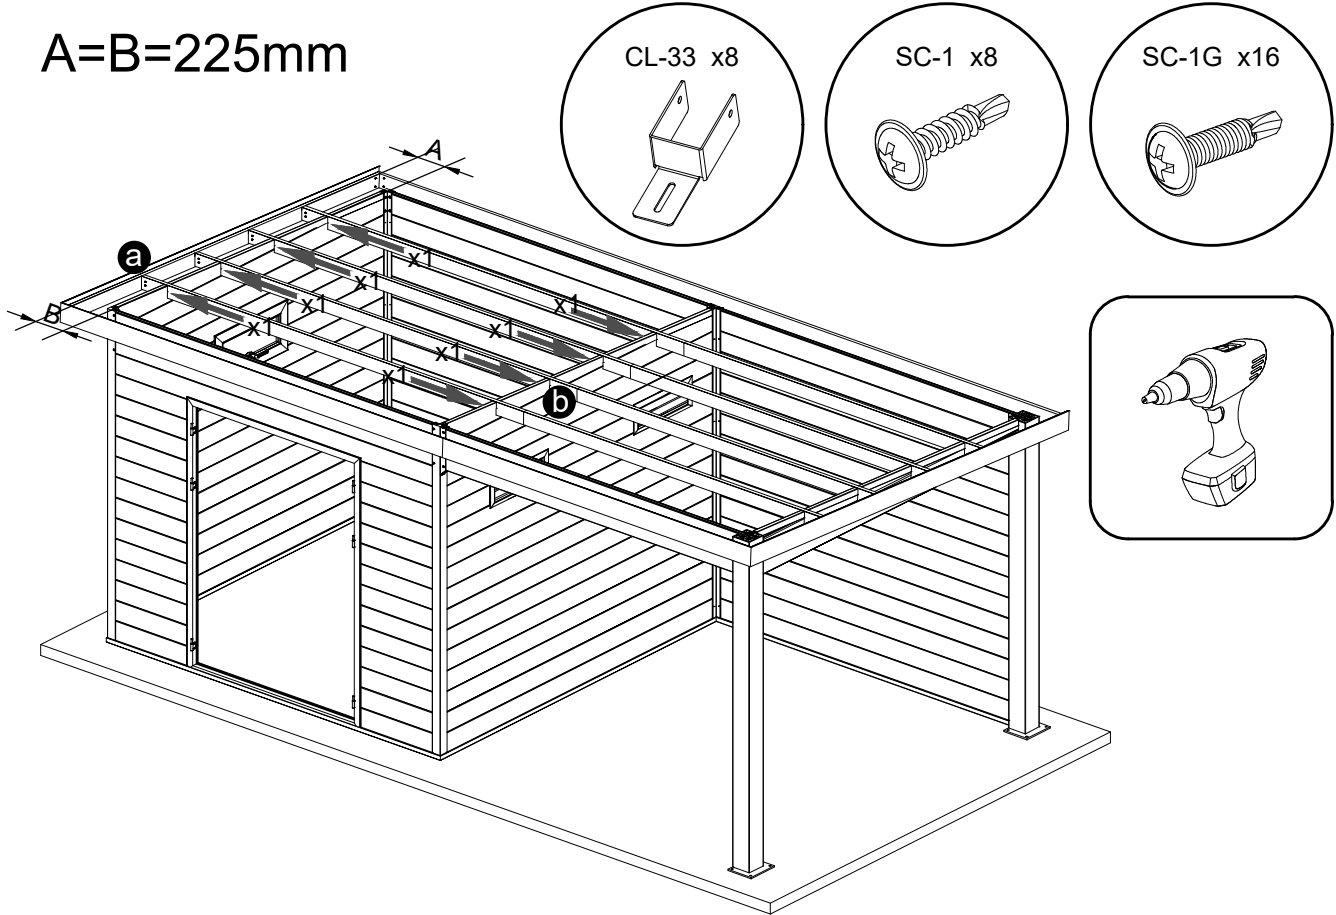


STEP 19 :Strengthening connections

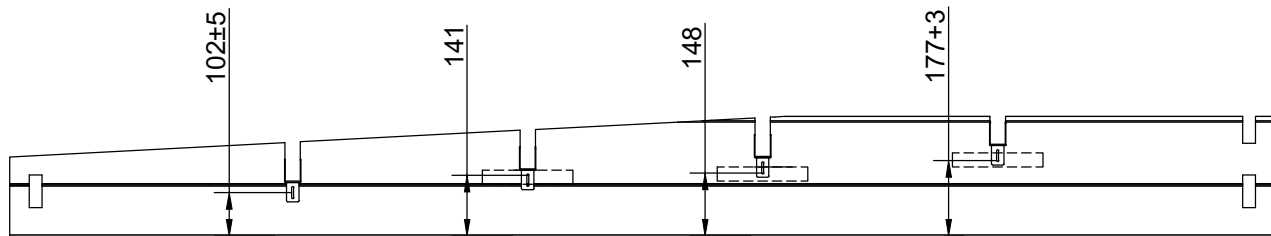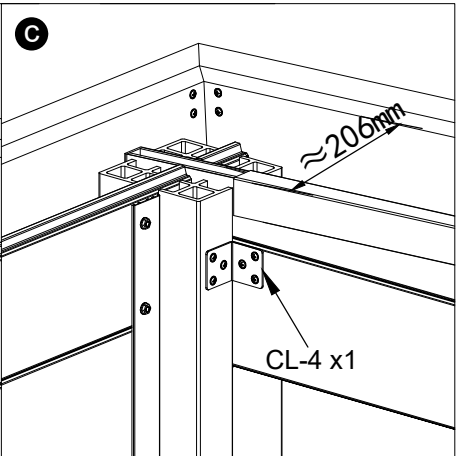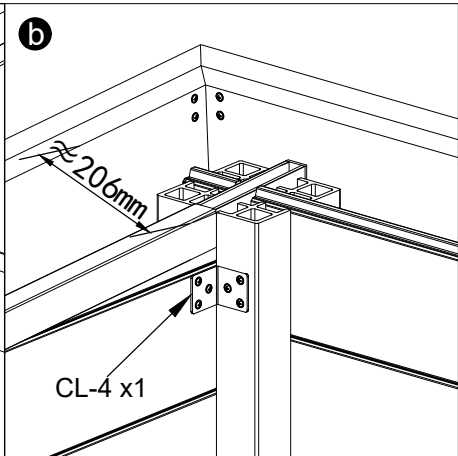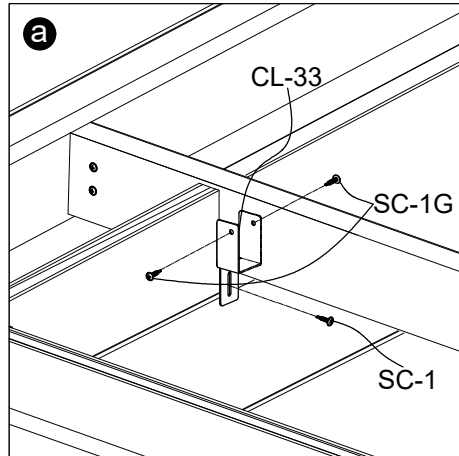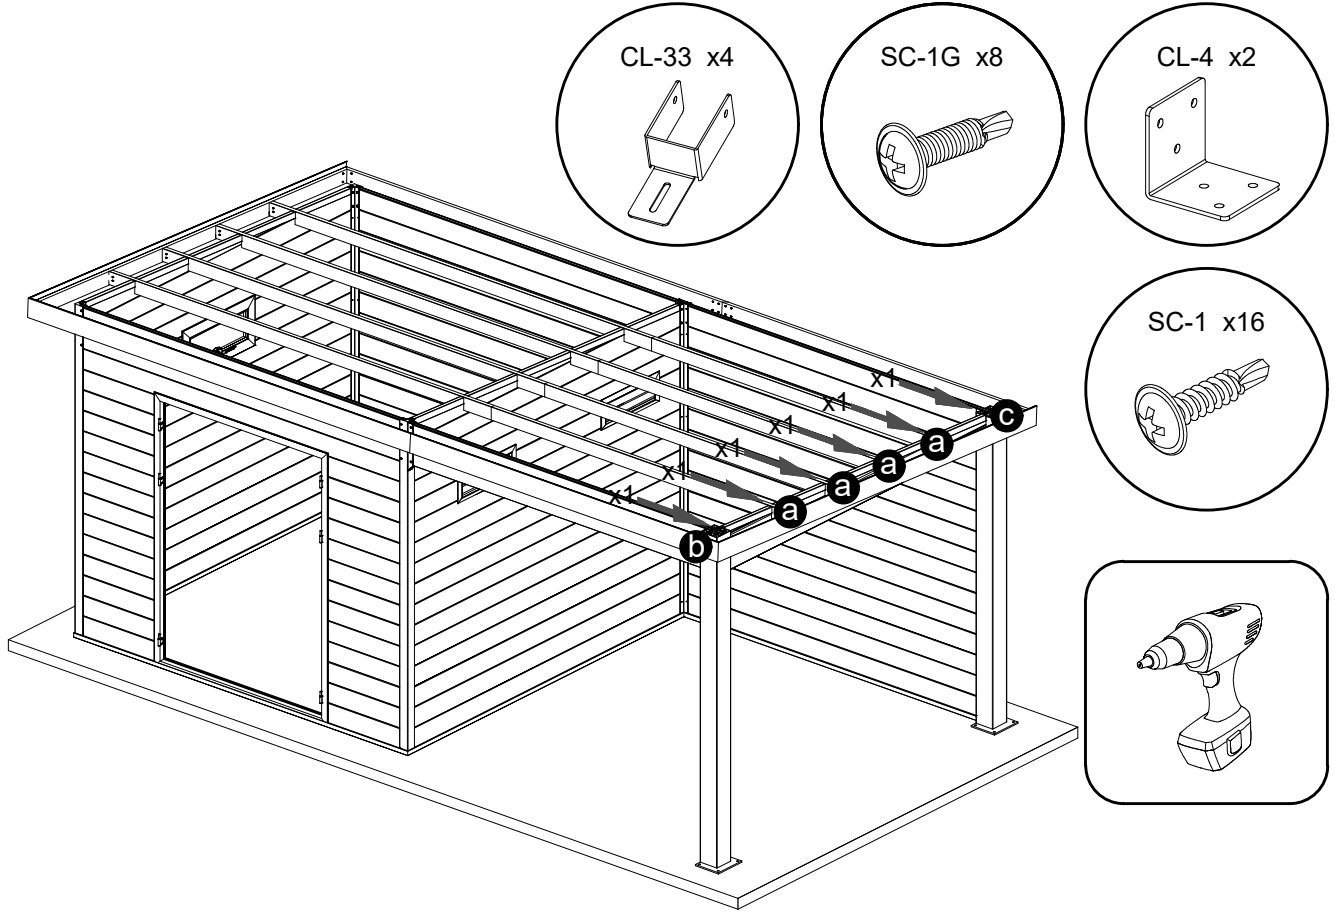




STEP 20-1 : The installation of top roof panel.

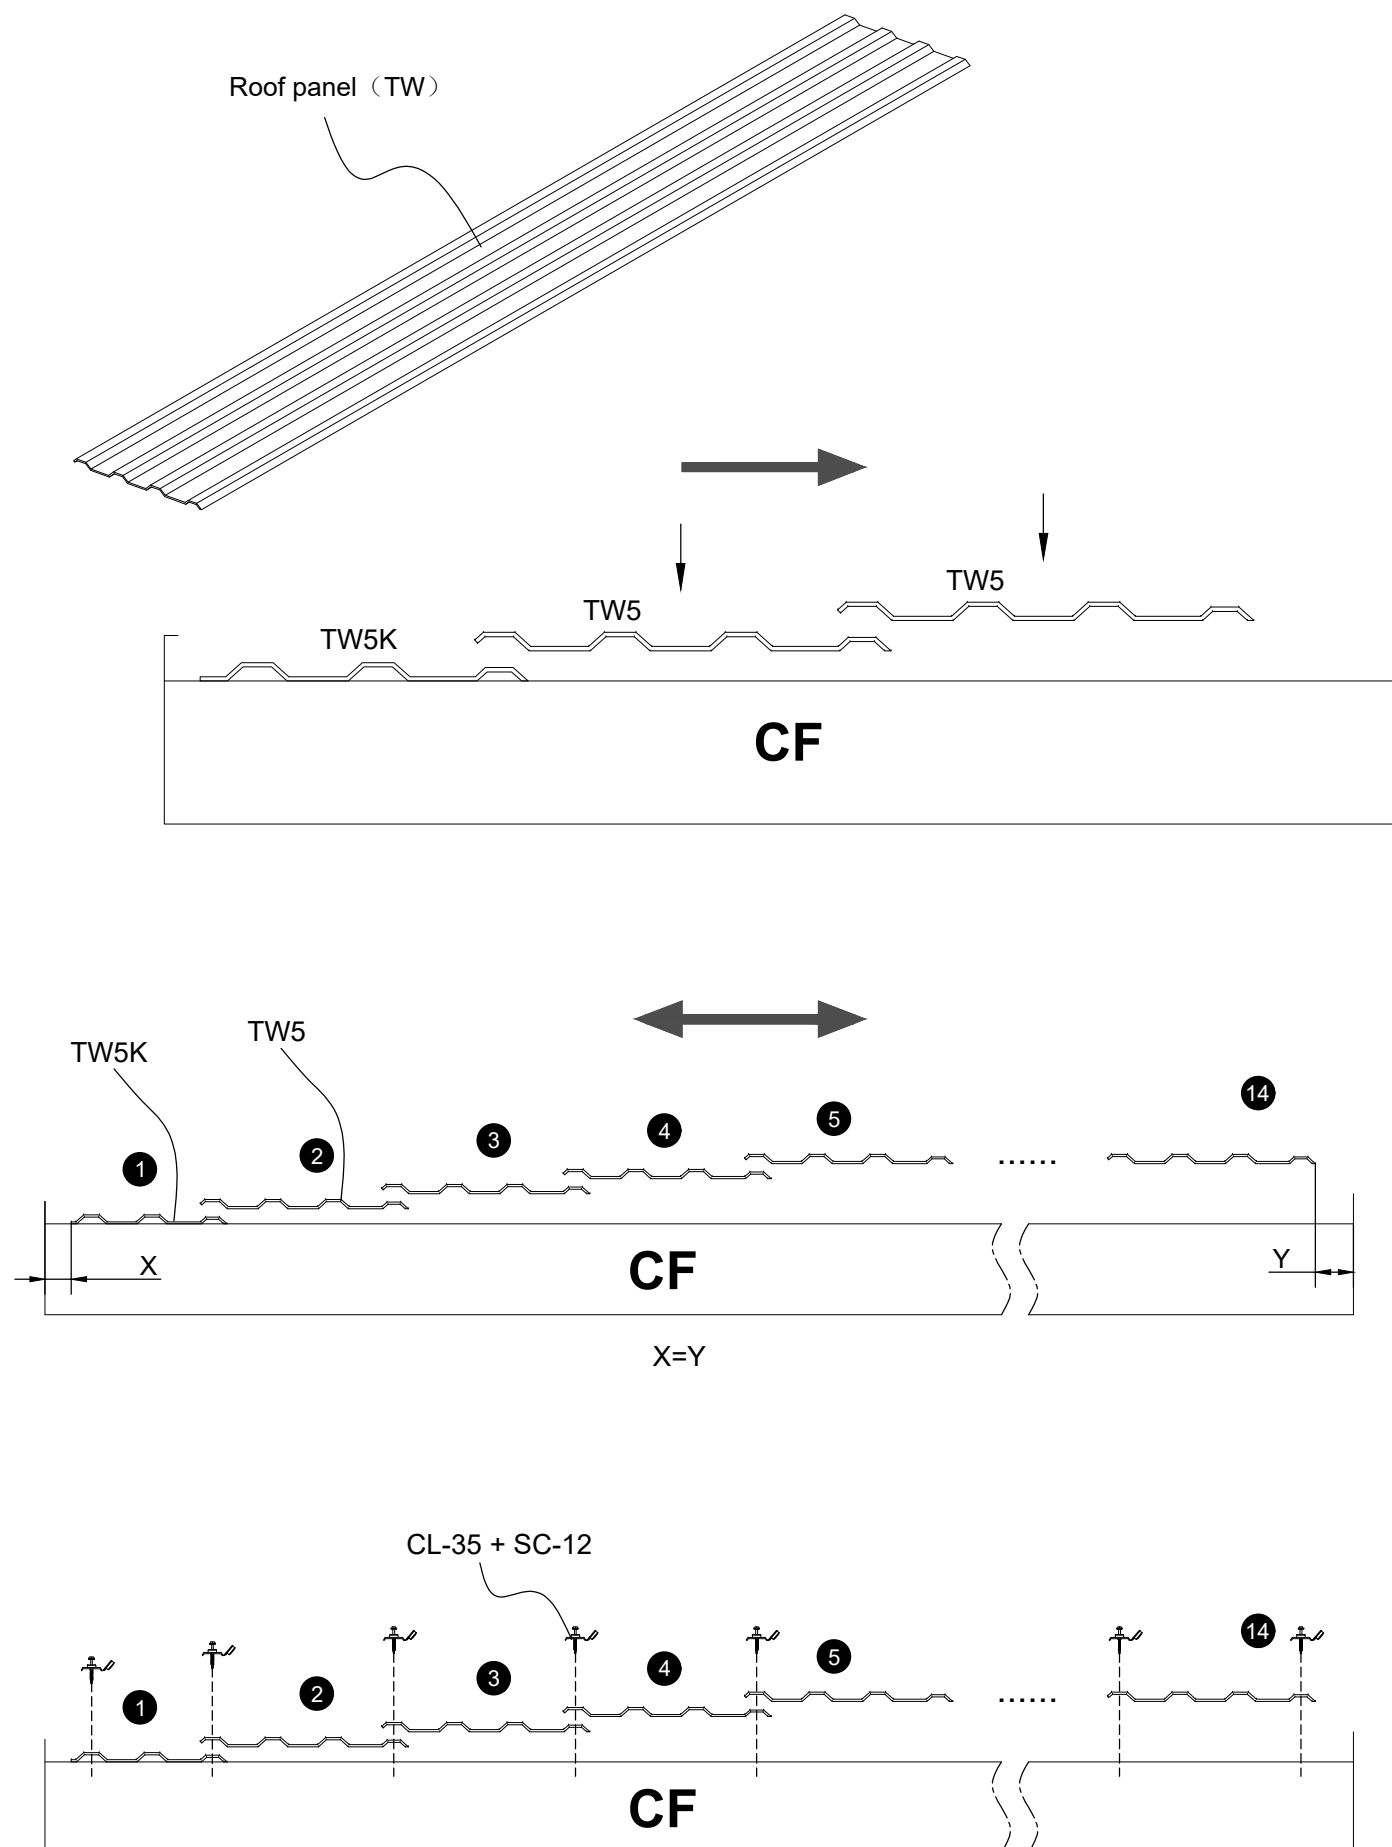







STEP 20-2 :The installation of top roof panel.

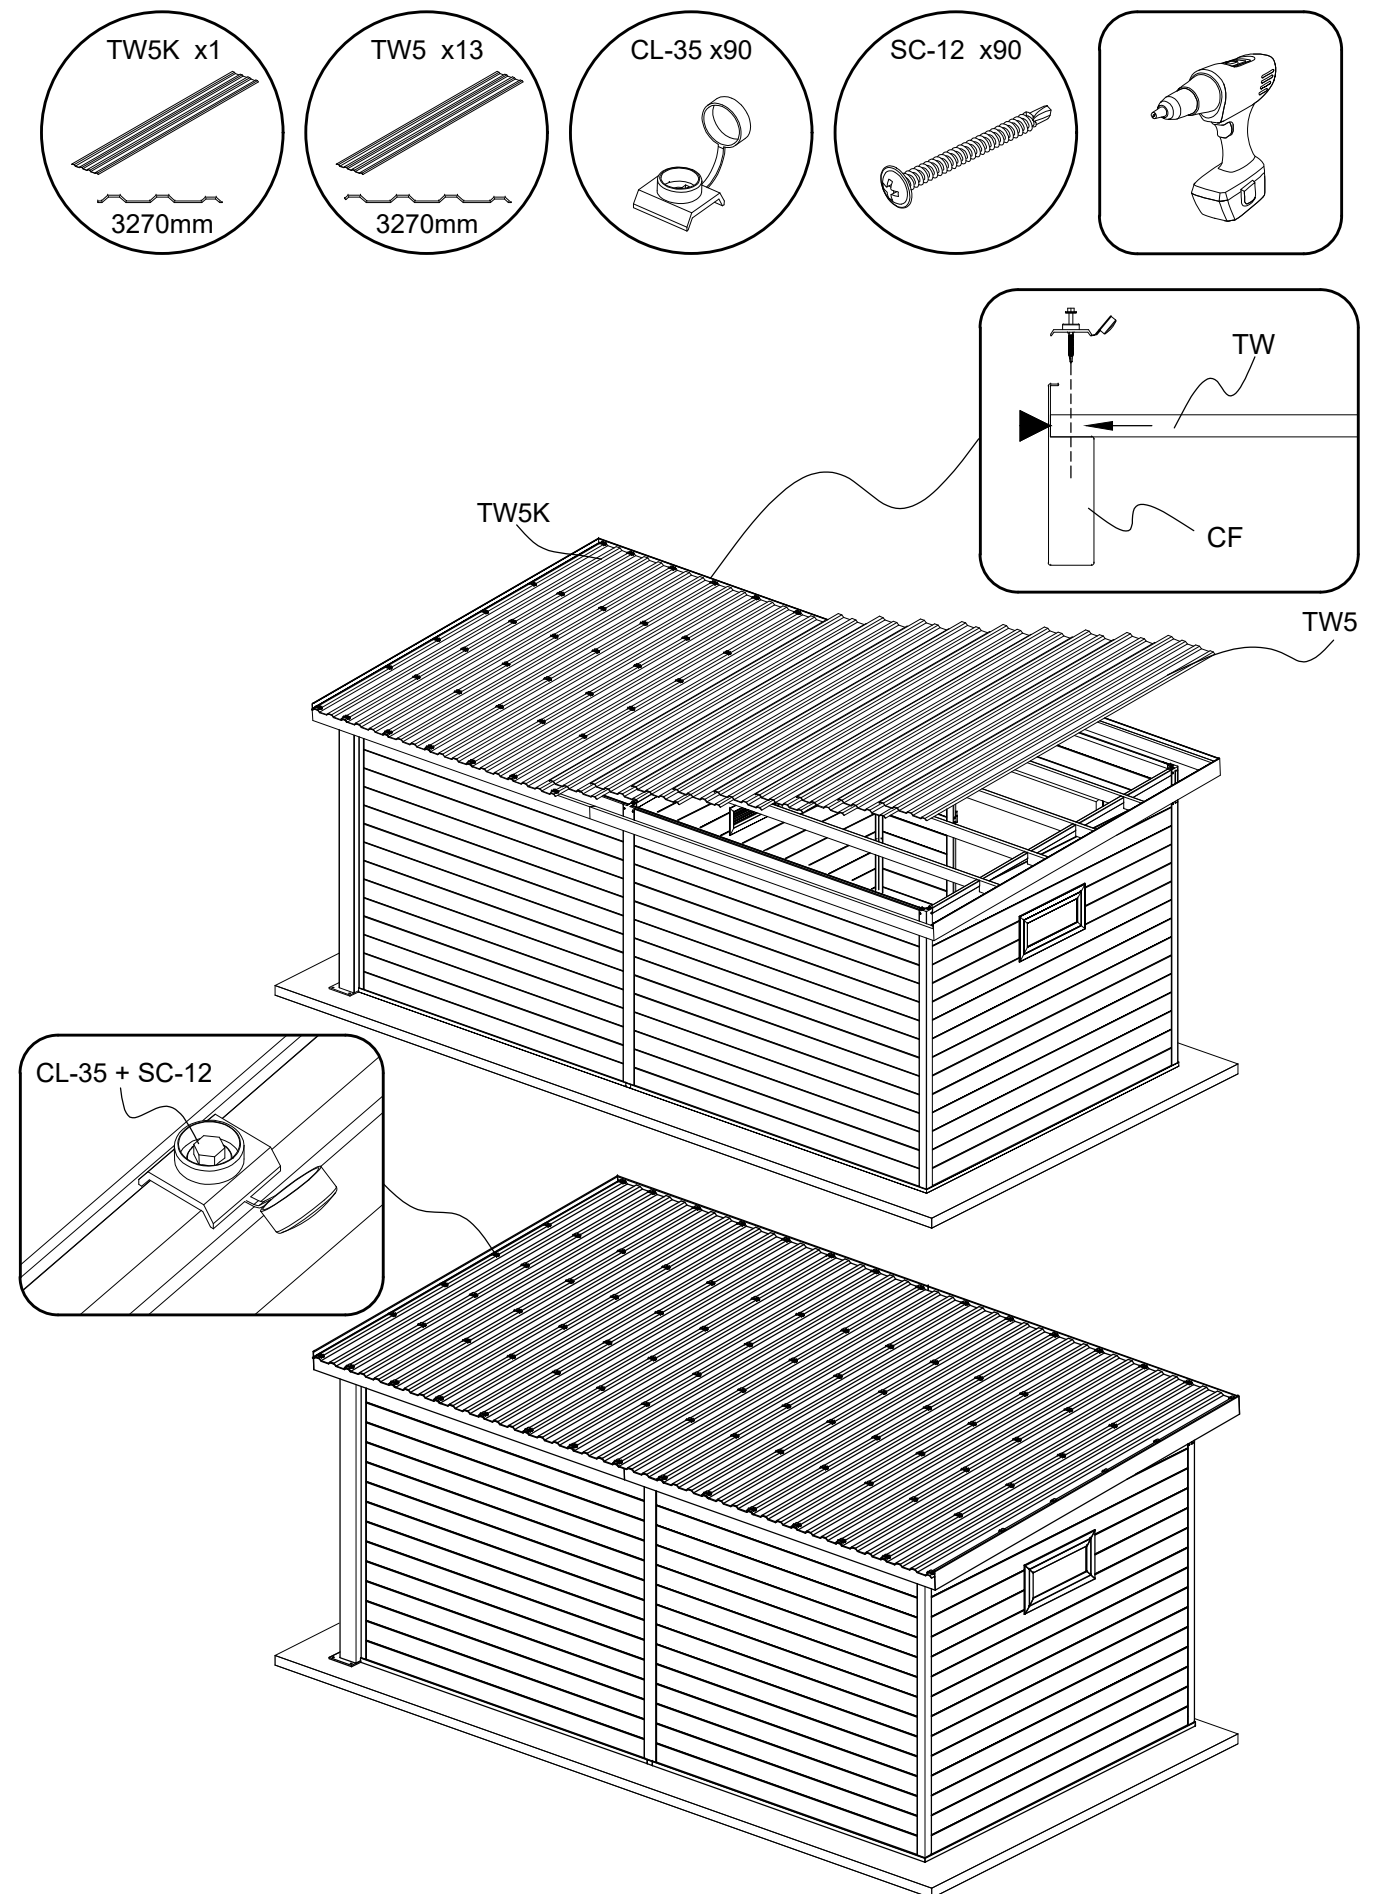







STEP 21 : DOOR and LOCK

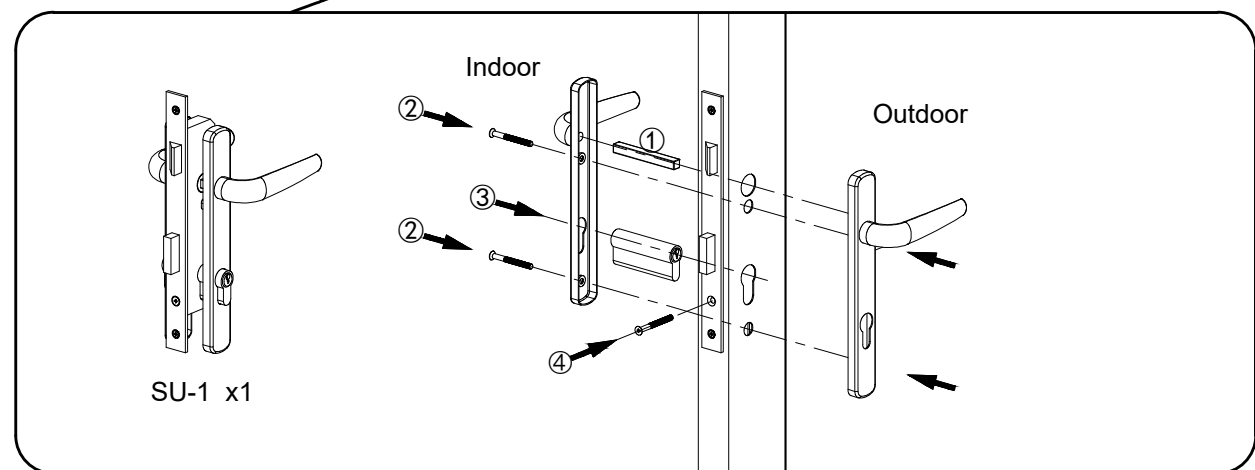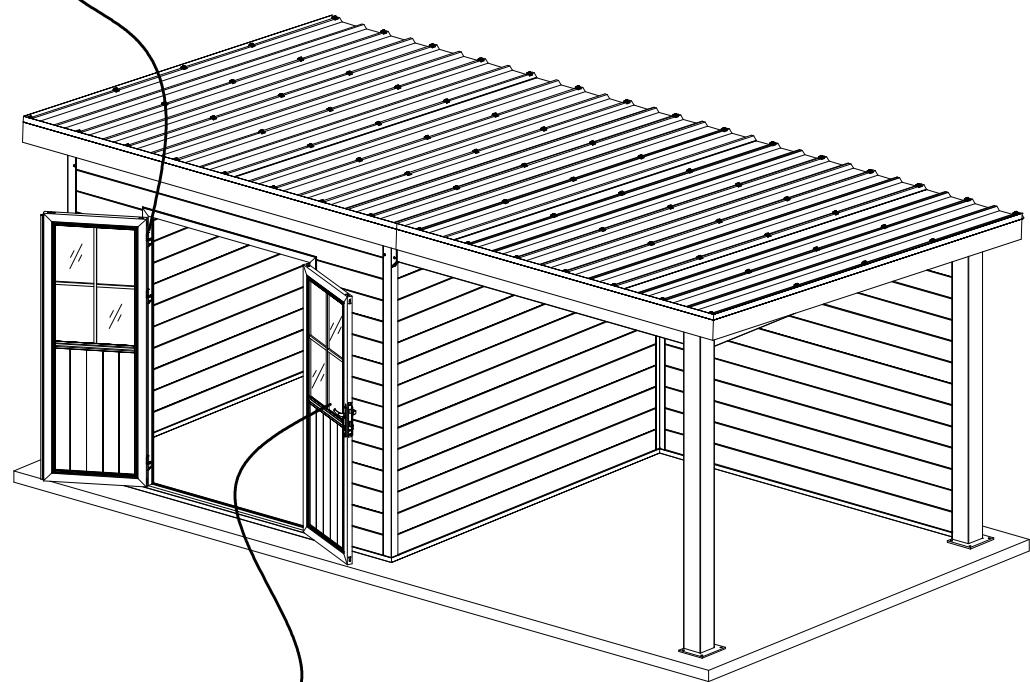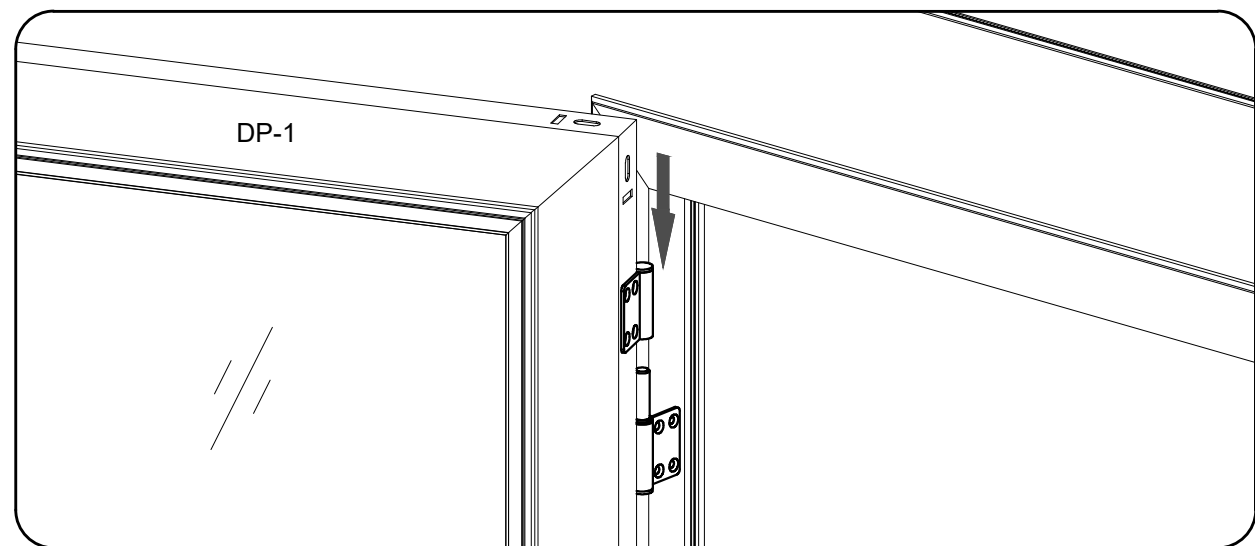

STEP 22 : Connecting Together

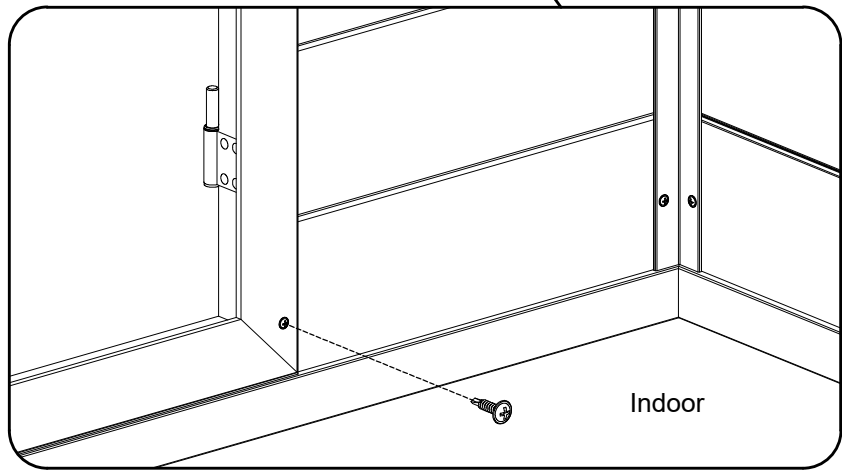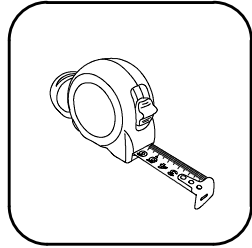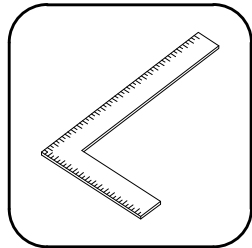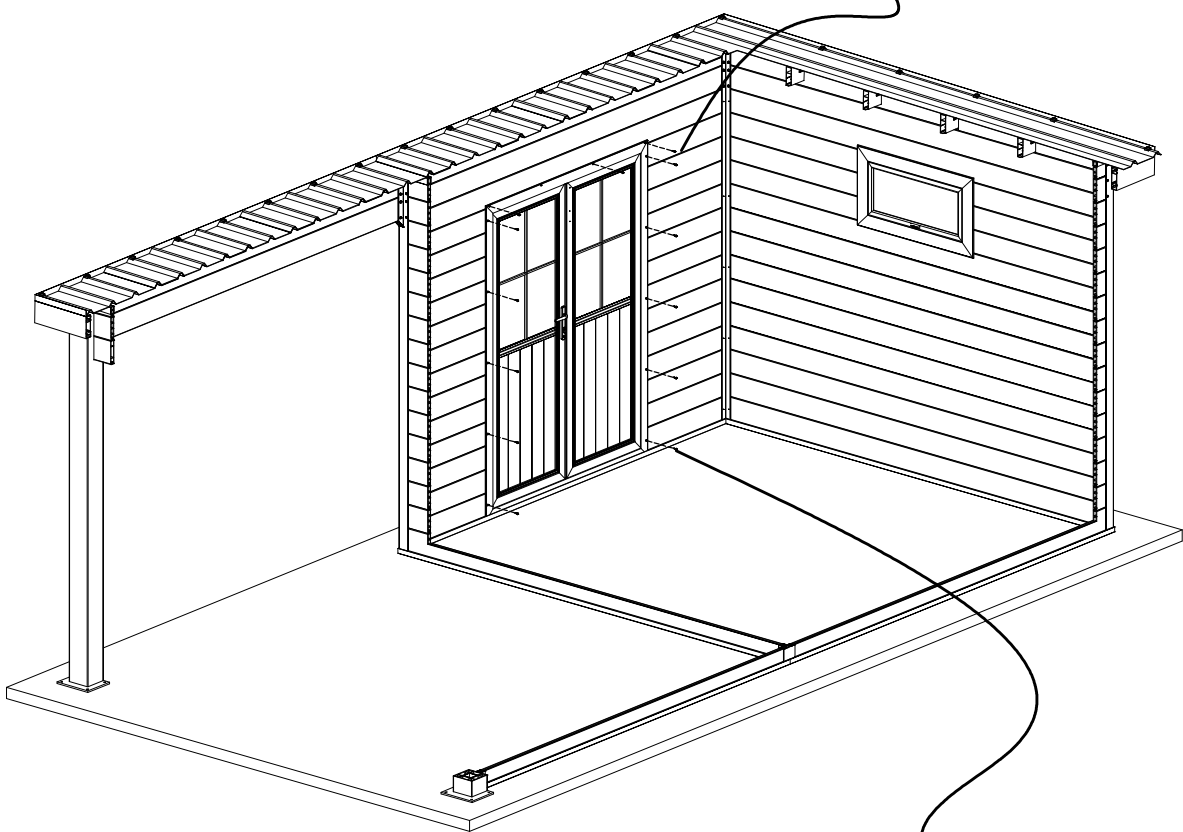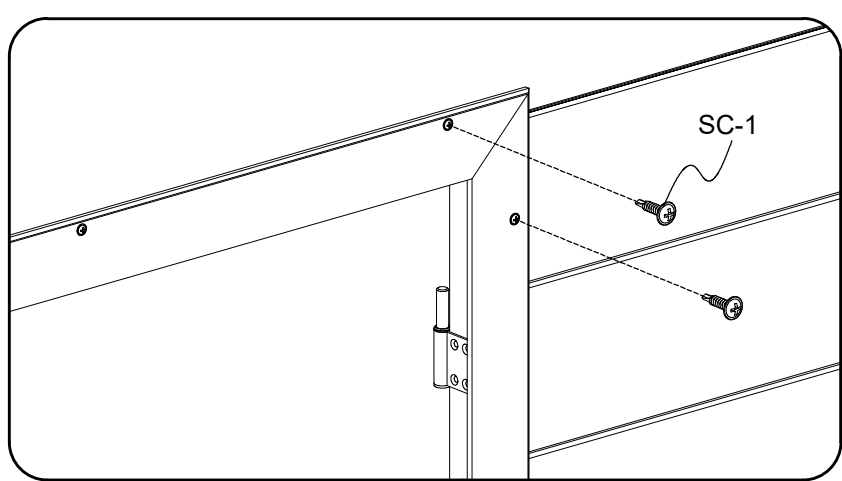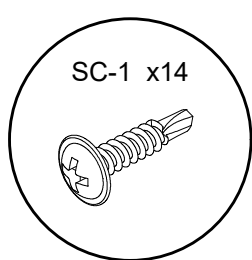

STEP 23 :

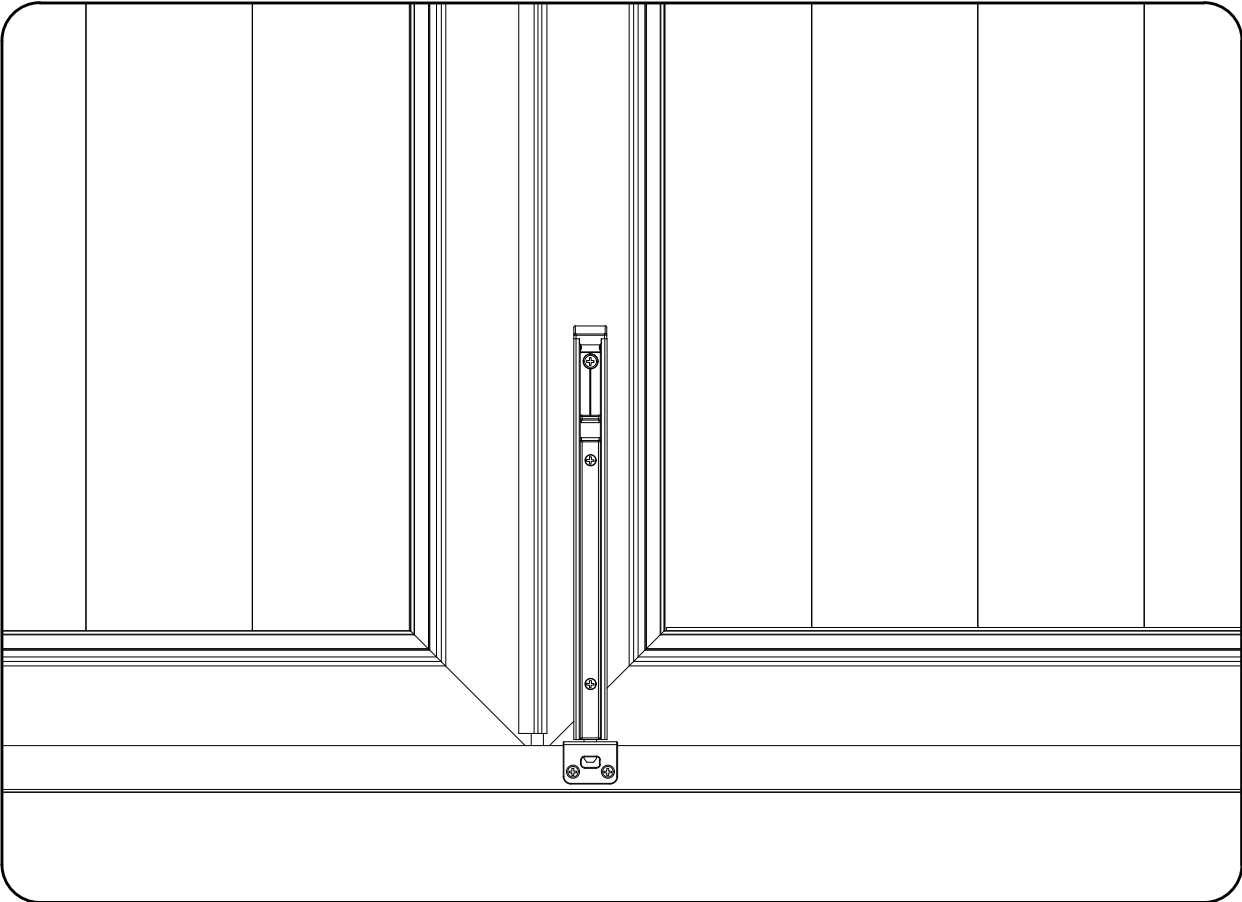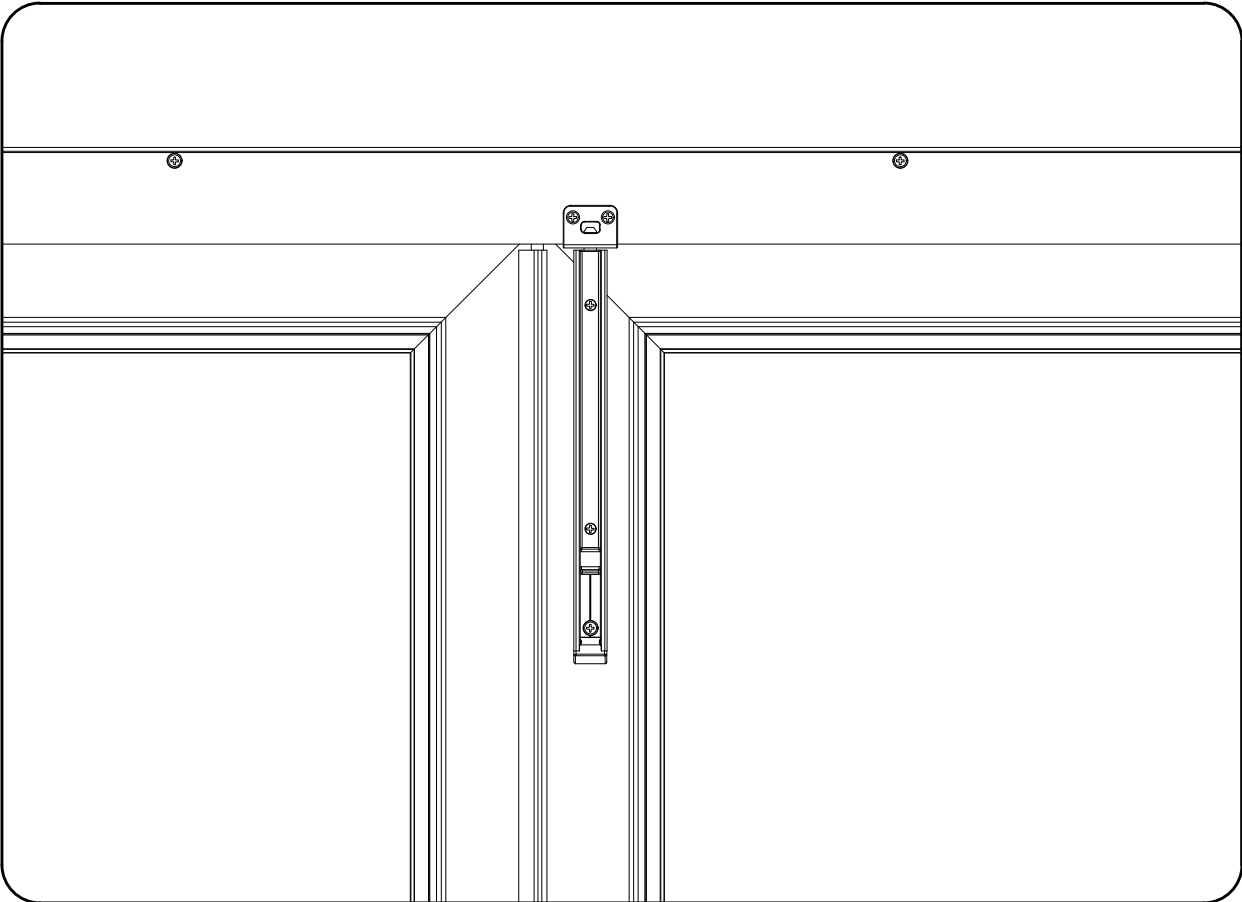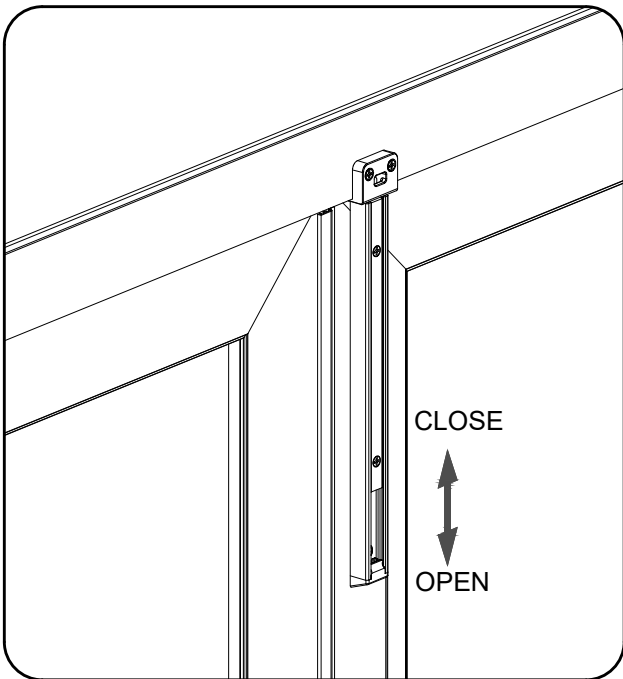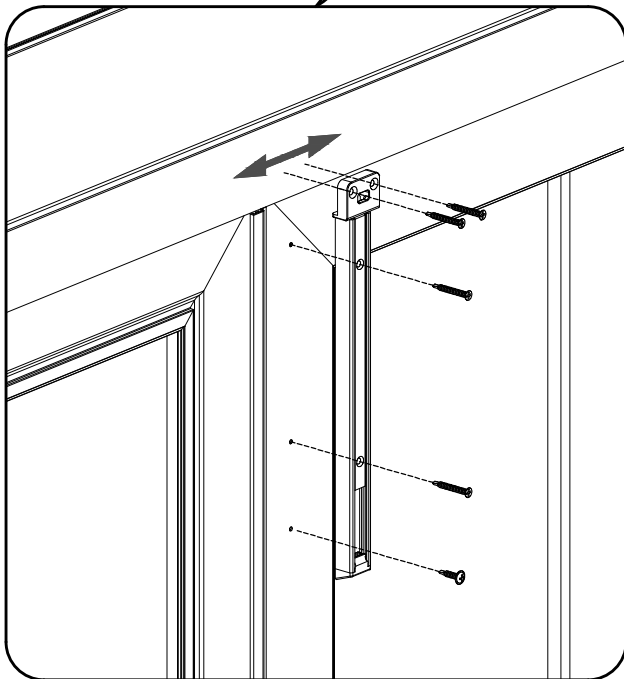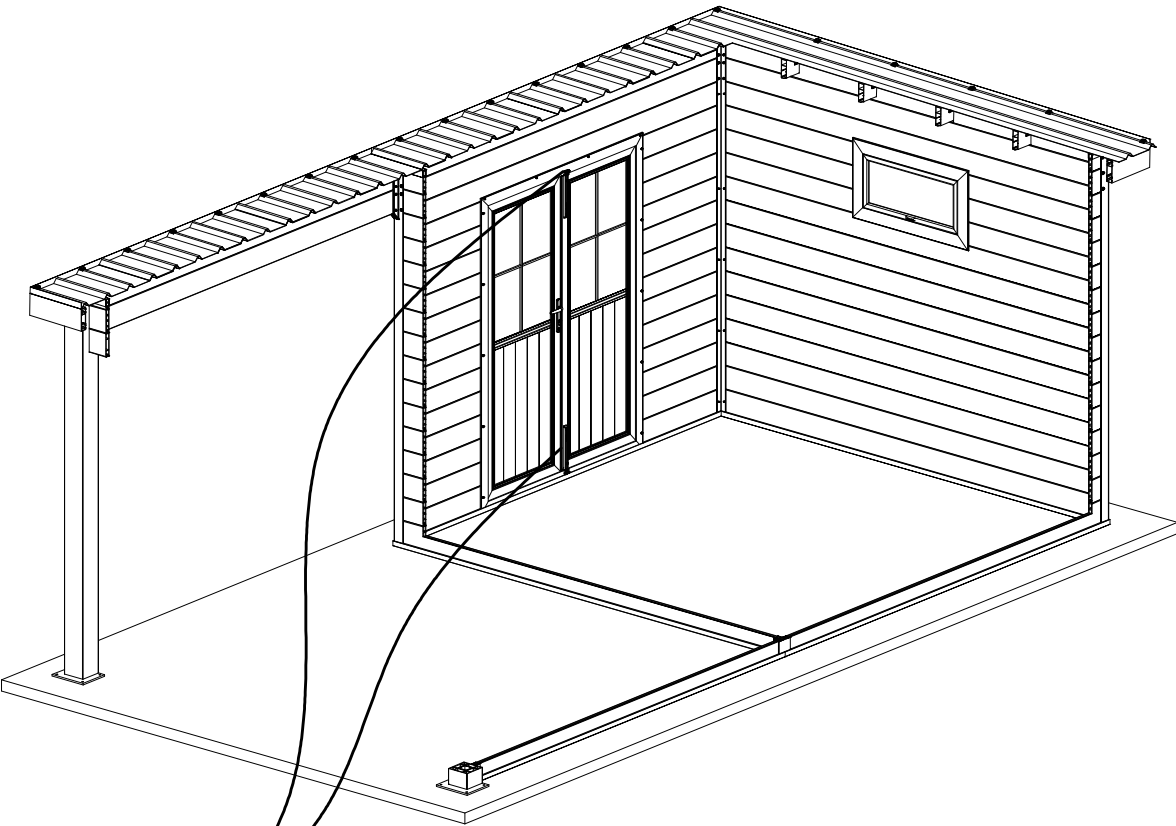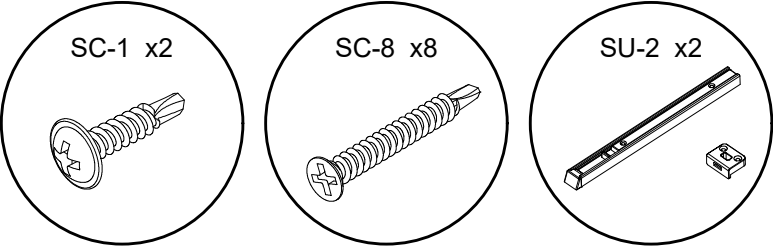

The installation of window fastener

